


OPERATING SERVICE AND MAINTENANCE MANUAL



WORM GEAR HYDRAULIC WINCH

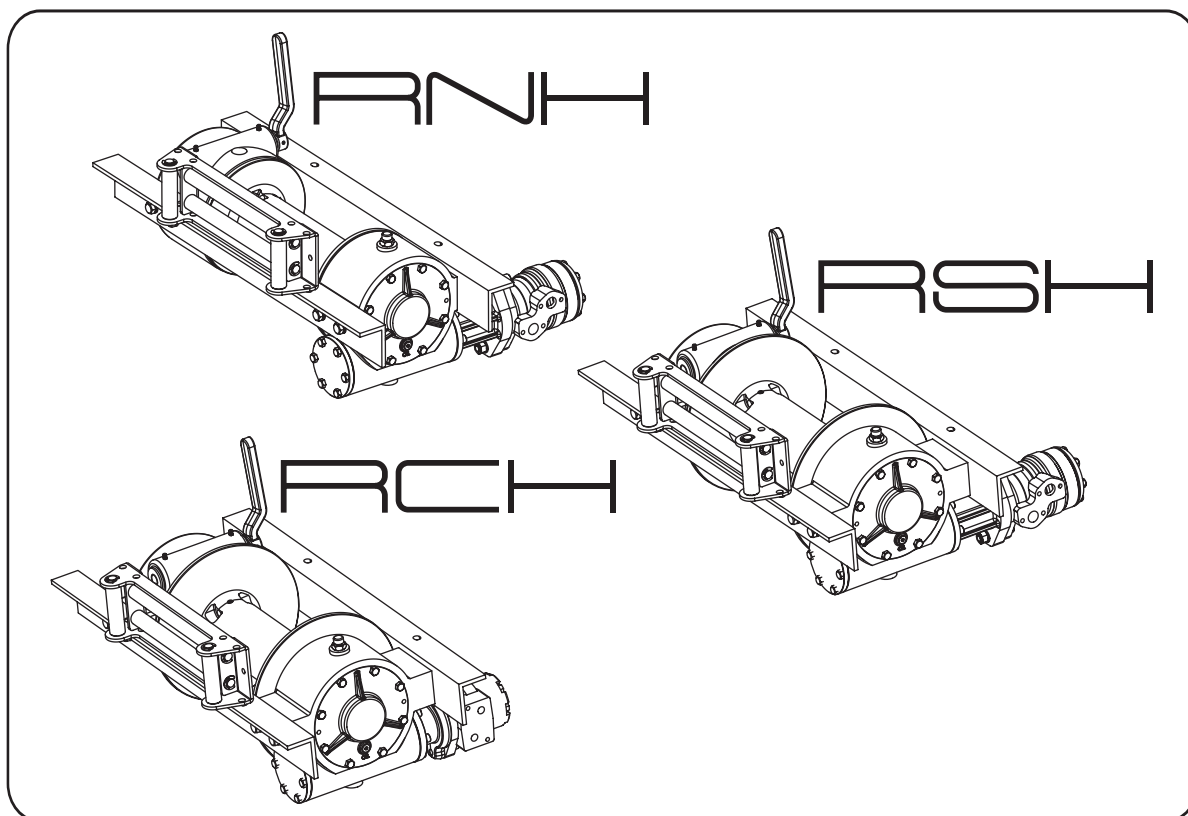

Because of continued product improvement, we reserve the right to make changes without notice.

CE
EN 14492-1



WARNING

Read and understand this manual before installation and operation of winch.
Keep this manual with the winch at all times.

VIME has no responsibility for physical injury to persons, animals or property damages. That can result from failure to read and apply the instructions contained in the manual supplied with the winch and especially for: Failure with global safety aspects - Not correct linking to the source of energy - Deficiency in the annual and monthly maintenance - Improper uses - Any alteration, repair or modification from unauthorized personnel.



WARNING

Do not operate this winch until you have fully read this manual.

Many accidents are due for non observance safety procedures. A good reason, most of it can be avoided by knowing causes and taking in advance the opportunity safety.



WARNING

Read and understand this manual before installation and operation of winch.

Model	RNH 4400 RSH 4500 RSH 5250 RCH 4500 RCH 5250	
Serial number		
Manufacture year		
Max. rated line pull	<ul style="list-style-type: none"> • RNH 4400 • RSH 4500 • RSH 5250 • RCH 4500 • RCH 5250 	4.400 kg 4.500 kg 5.250 kg 4.500 kg 5.250 kg
Wire rope diameter	<ul style="list-style-type: none"> • RNH 4400 • RSH 4500-RCH 4500 • RSH 5250-RCH 5250 	Dia. 10 mm Dia. 11 mm Dia. 11 mm
Max. pressure	<ul style="list-style-type: none"> • RNH 4400-RSH 5250-RCH 5250 • RSH 4500 • RCH 4500 	140 bar 150 bar 130 bar
Weight (with standard roller fairlead and without cable)	<ul style="list-style-type: none"> • RNH 4400 • RSH 4500-RSH 5250 • RCH 4500-RCH 5250 	51 kg 60 kg 58 kg

TABLE OF CONTENTS



SECTION 1	SAFETY PROCEDURES	4
1.1	<i>INTRODUCTION</i>	4
1.2	<i>SYMBOLS</i>	5
1.3	<i>WARNING SYMBOLS</i>	5
1.4	<i>DESCRIPTION</i>	6
1.4.1	<i>Winches description</i>	6
1.4.2	<i>RNH 4400 Winch dimensional data</i>	7
1.4.3	<i>RNH 4400 Winch technical data</i>	8
1.4.4	<i>RNH 4400 Winch performance charts at the 1st layer</i>	8
1.4.5	<i>RSH 4500 Winch dimensional data</i>	9
1.4.6	<i>RSH 4500 Winch technical data</i>	10
1.4.7	<i>RSH 4500 Winch performance charts at the 1st layer</i>	10
1.4.8	<i>RSH 5250 Winch dimensional data</i>	11
1.4.9	<i>RSH 5250 Winch technical data</i>	12
1.4.10	<i>RSH 5250 Winch performance charts at the 1st layer</i>	12
1.4.11	<i>RCH 4500 Winch dimensional data</i>	13
1.4.12	<i>RCH 4500 Winch technical data</i>	14
1.4.13	<i>RCH 4500 Winch performance charts at the 1st layer</i>	14
1.4.14	<i>RCH 5250 Winch dimensional data</i>	15
1.4.15	<i>RCH 5250 Winch technical data</i>	16
1.4.16	<i>RCH 5250 Winch performance charts at the 1st layer</i>	16
1.5	<i>WINCH DECALS. SAFETY ADVICES</i>	17
1.6	<i>CONDITIONS OF SALE</i>	17
1.6.1	<i>Packaging</i>	18
1.6.2	<i>Packaging illustration</i>	18
1.7	<i>SAFETY PROCEDURES</i>	19
SECTION 2	MOUNTING	20
2.1	<i>ROAD TRAFFIC</i>	20
2.2	<i>WINCH MOUNTING</i>	20
2.3	<i>FLEET ANGLE</i>	22
2.4	<i>WINCH MOUNTING ANGLES</i>	22
2.5	<i>HYDRAULIC SYSTEM</i>	24
2.6	<i>HYDRAULIC MOTOR LINKAGE</i>	26
2.7	<i>AIR-OPERATED FREESPOOL LINKAGE</i>	27
2.8	<i>CABLE INSTALLATION EN 14492-1</i>	28
SECTION 3	OPERATION	33
3.1	<i>OPERATION</i>	33
SECTION 4	ACCESSORIES	38
4.1	<i>ACCESSORIES</i>	38

TABLE OF CONTENTS



	4.1.1	Roller fairlead	38
	4.1.2	Cable tensioner	38
4.2		RECOMMENDATIONS FOR USE	39
	4.2.1	Roller fairlead	39
	4.2.2	Cable tensioner	40
SECTION 5		MAINTENANCE	41
5.1		MAINTENANCE	41
	5.1.1	Monthly maintenance	41
	5.1.2	Annual maintenance	44
SECTION 6		TROUBLE SHOOTING GUIDE	45
6.1		TROUBLE SHOOTING GUIDE	45
SECTION 7		PARTS LIST	47
7.1		PARTS LIST RNH 4400	47
7.2		PARTS DRAWING RNH 4400	48
7.3		PARTS LIST RSH 4500-RSH 5250	49
7.4		PARTS DRAWING RSH 4500-RSH 5250	50
7.5		PARTS LIST RCH 4500-RCH 5250	51
7.6		PARTS DRAWING RCH 4500-RCH 5250	52
7.7		PARTS LIST STANDARD ROLLER FAIRLEAD	53
7.8		PARTS DRAWING STANDARD ROLLER FAIRLEAD	54
7.9		PARTS LIST HEAVY-DUTY ROLLER FAIRLEAD	55
7.10		PARTS DRAWING HEAVY-DUTY ROLLER FAIRLEAD	56
7.11		PARTS LIST CABLE TENSIONER	57
7.12		PARTS DRAWING CABLE TENSIONER	58

SECTION 1

SAFETY PROCEDURES



1.1. INTRODUCTION

Manual identified by code No. 01/2011 UK - REV B - 04 - EN 14492-1 has 58 pages.



IMPORTANT

At the delivery of this manual checks all data and for possible incongruities.

VIME reserves the right to improve its products through changes in designed or materials as it may seem desirable without being obligated to incorporate such changes in this manual.

This manual contains useful ideas in obtaining the most efficient operation and maintenance from the winch and safety procedures one need to know before operating a winch.

For safety procedures, read carefully safety procedures in chapter 1.7.

Manual has to be kept intact and near to the winch for a prompt reading and consultation.



WARNING

In case of misunderstanding of this manual or parts of it, please contact VIME. For repair service contact VIME.

For a rapid consultations, manual is being shared in 7 sections:

- Section 1 Safety procedures
- Section 2 Mounting
- Section 3 Operation
- Section 4 Accessories

Section 5 Maintenance

Section 6 Trouble shooting guide

Section 7 Parts list

Section **1** contains alls data for winch operations, for **SAFETY PROCEDURES** and full winch description. Section **2** contains note about road traffic, hydraulic system, winch and cable drum installations. Section **3** contains all information for safety procedures. Section **4** accessories description. Section **5** is referred to the operator in charge of the winch maintenance. In this section are indicated all procedures as well as the maintenance must be executed in winch life. Section **6** is a guide for a trouble shooting should verify in winching operation. Section **7** contains parts list codes and parts drawing. All sections are shared in chapters progressive numbered. Chapters are shared in subsections progressive numbered.



IMPORTANT

For a rapid reading see table of contents.

1.2 SYMBOLS

In this manual there are three different symbols to prevent serious injuries.

- “DANGEROUS “ symbol



DANGEROUS

Used to indicate dangerous situation and prevent injury.

- “WARNING” symbol



WARNING

Used to indicate dangerous situation for winch efficiency and for operator safety.

- “IMPORTANT” symbol



IMPORTANT

Used to call attention on important informations which user must knowing.

In addition to all warning symbols has been used a symbol to underline the notes.

- “NOTE” symbol



NOTE

Used to call attention on informations or advices that could help on winching operation.

The various symbols are completed by messages that describe in detail such warnings and dangerous situation, not neglecting to point out the recommended procedures and the useful informations.

1.3 SYMBOLS

According to EEC Directive Machinery 2006/42/CE, on VIME’S winches there are, in a visibile position for the utiliser, the following symbols:



CABLE INJURES KEEP CLEAR
(roller fairlead)



READ CAREFULLY THE OPERATING SERVICE AND MAINTENANCE MANUAL (winch identifica-



KEEP SAFETY DISTANCE
(winch identification decal)



WEAR WORKING GLOVES
(winch identification decal)



IMPORTANT

**We recommend to respect the symbols above.
It is necessary to recognize the meaning of symbols and keeping visibile and readable.
If decals are damaged or unreadable replace it.**

1.4 DESCRIPTION

Model RH is an hydraulic worm gear winch. Designed for extend life and gives best safe duty. This winch is built according with higher safety standards to complaint with Directive Machinery 2006/24/CE EN 14492-1. The special aluminium alloy bronze gear match to an hardened steel ground polished worm. Worm gear provides load reversing protection. It is suited for medium wreckers, carriers and trailers. Winches model RSH and RCH are equipped with large drum flanges for greater


rope capacity. Winch model RCH has very compact overall dimensions due to the short hydraulic motor size.



WARNING

The winch is built for working on range temperature between -20°C and $+50^{\circ}\text{C}$. Do not exceed the range temperature it may be cause damage.

1.4.1 WINCHES DESCRIPTION

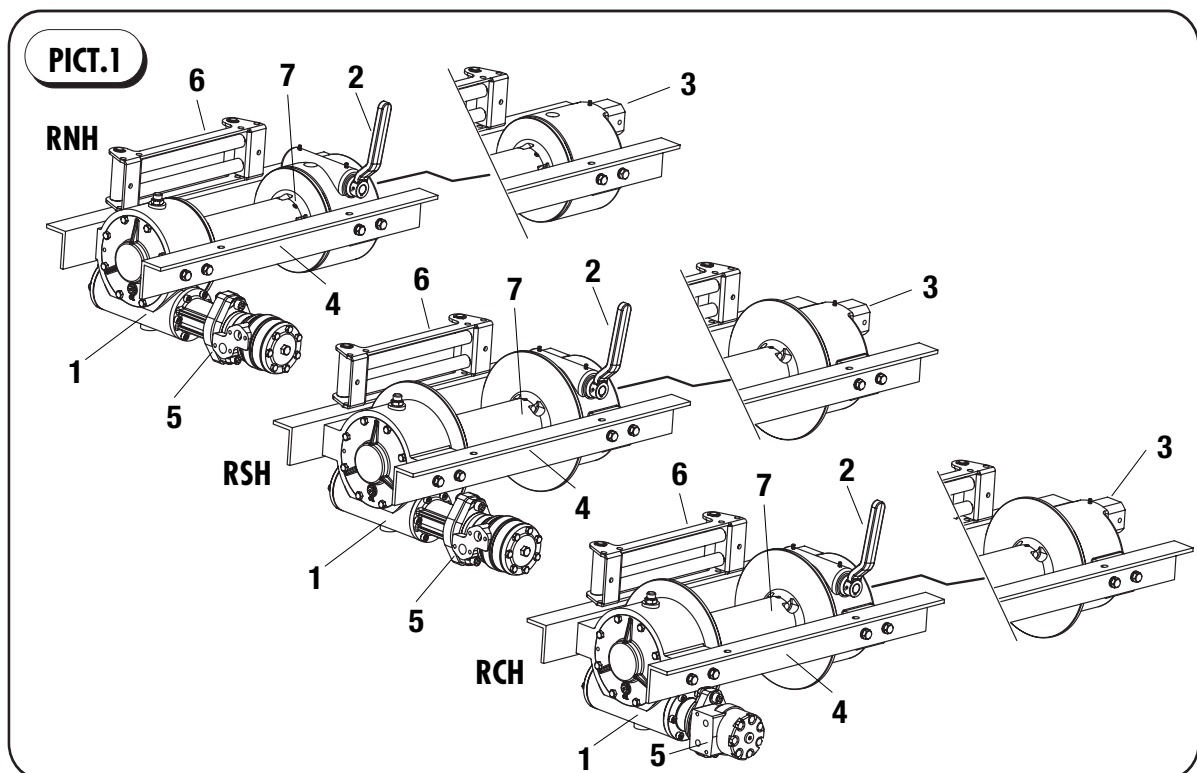

Components:

1. Worm gear housing
2. Manual clutch for drum free spooling
3. Air-cylinder clutch for drum free spooling (on request)
4. Standard mounting angles
735 mm / 28,9 inch
5. Orbital hydraulic motor:

125cc-160cc mod. RNH - RSH

160cc mod. RCH

6. Zinc plated Standard roller fairlead
Zinc plated Heavy-duty roller fairlead (on request)

7. Drum - lateral flanges diameter:
dia.200 mm / 7,9 inch - RNH
dia.267,5 mm / 10,5 inch - RSH - RCH



1.4.3 RNH 4400 WINCH TECHNICAL DATA


RATIO	WIRE ROPE SIZE [MM]	LAYER	LINE PULL
			[KGS.]
1/29	10*	1	4.400
		2	3.695
		3	3.185
		4	2.800
		5	2.500

OIL SUPPLY [LT/MIN]	DRUM REVOLUTION [RPM]	LINE SPEED [MT/MIN]				
		1	2	3	4	5
30	7,3	2,4	2,9	3,3	3,8	4,2
40	9,7	3,2	3,8	4,4	5,0	5,6
60	14,9	4,9	5,8	6,8	7,7	8,7

WIRE ROPE MINIMUM BREAKING LOAD EN 14492-1 [KG]	8.800
---	-------

LAYER	DRUM DIAMETER	WIRE ROPE ON LAYER		WIRE ROPE QUANTITY	
		[MT]		[MT]	
	Ø MM	10 MM	00 MM	10 MM	00 MM
5	184	-	16,5	-	64,6
4	164	-	14,7	-	48,1
3	144	-	12,9	-	33,4
2	124	-	11,1	-	20,5
1	104	-	9,3	-	9,3
0	94	-	-	-	-

DRUM SIZE RNH = 295,5 MM

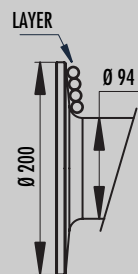

WIRE ROPE CAPACITY [MT]		MAX. WIRE ROPE CAPACITY EN 14492-1 [MT]		MAX. WIRE ROPE CAPACITY [MT]	
10 MM	00 MM	10 MM	00 MM	10 MM	00 MM
30	00	48**	00	64	00

DESCRIPTION	WEIGHT
	[KGS.]
WINCH (WITH STANDARD ROLLER FAIRLEAD AND WITHOUT CABLE)	51
ACCESSORY : HEAVY-DUTY ROLLER FAIRLEAD	9,6
ACCESSORY : CABLE TENSIONER	2,2

NOTE

Specifications are subject to change without notification and without incurring obligation. Specifications in this publication are theoretical and may vary depending on hydraulic system, environment, etc.


NOTE

*Wire rope size must be respected. Recommended wire rope min. tensile strength 2160 N/mm².
Wire rope minimum breaking load must be at least double of winch max. pulling capacity.


** Max. wire rope capacity according with EN 14492-1.

1.4.4 RNH 4400 WINCH PERFORMANCE CHARTS AT THE 1ST LAYER


LINE PULL-FIRST LAYER [KGS]

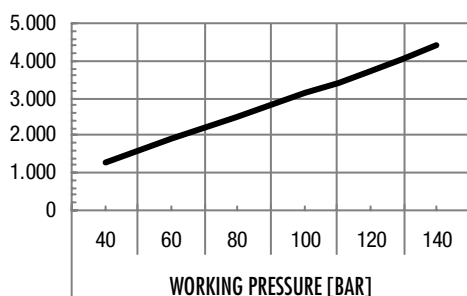

LINE SPEED [MT/MIN]

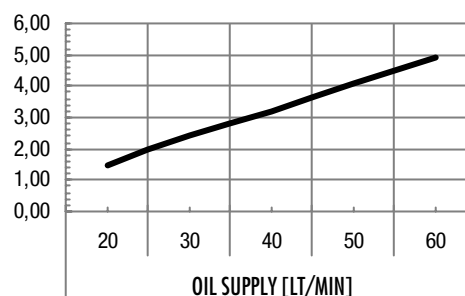

1.4.5 RSH 4500 WINCH DIMENSIONAL DATA

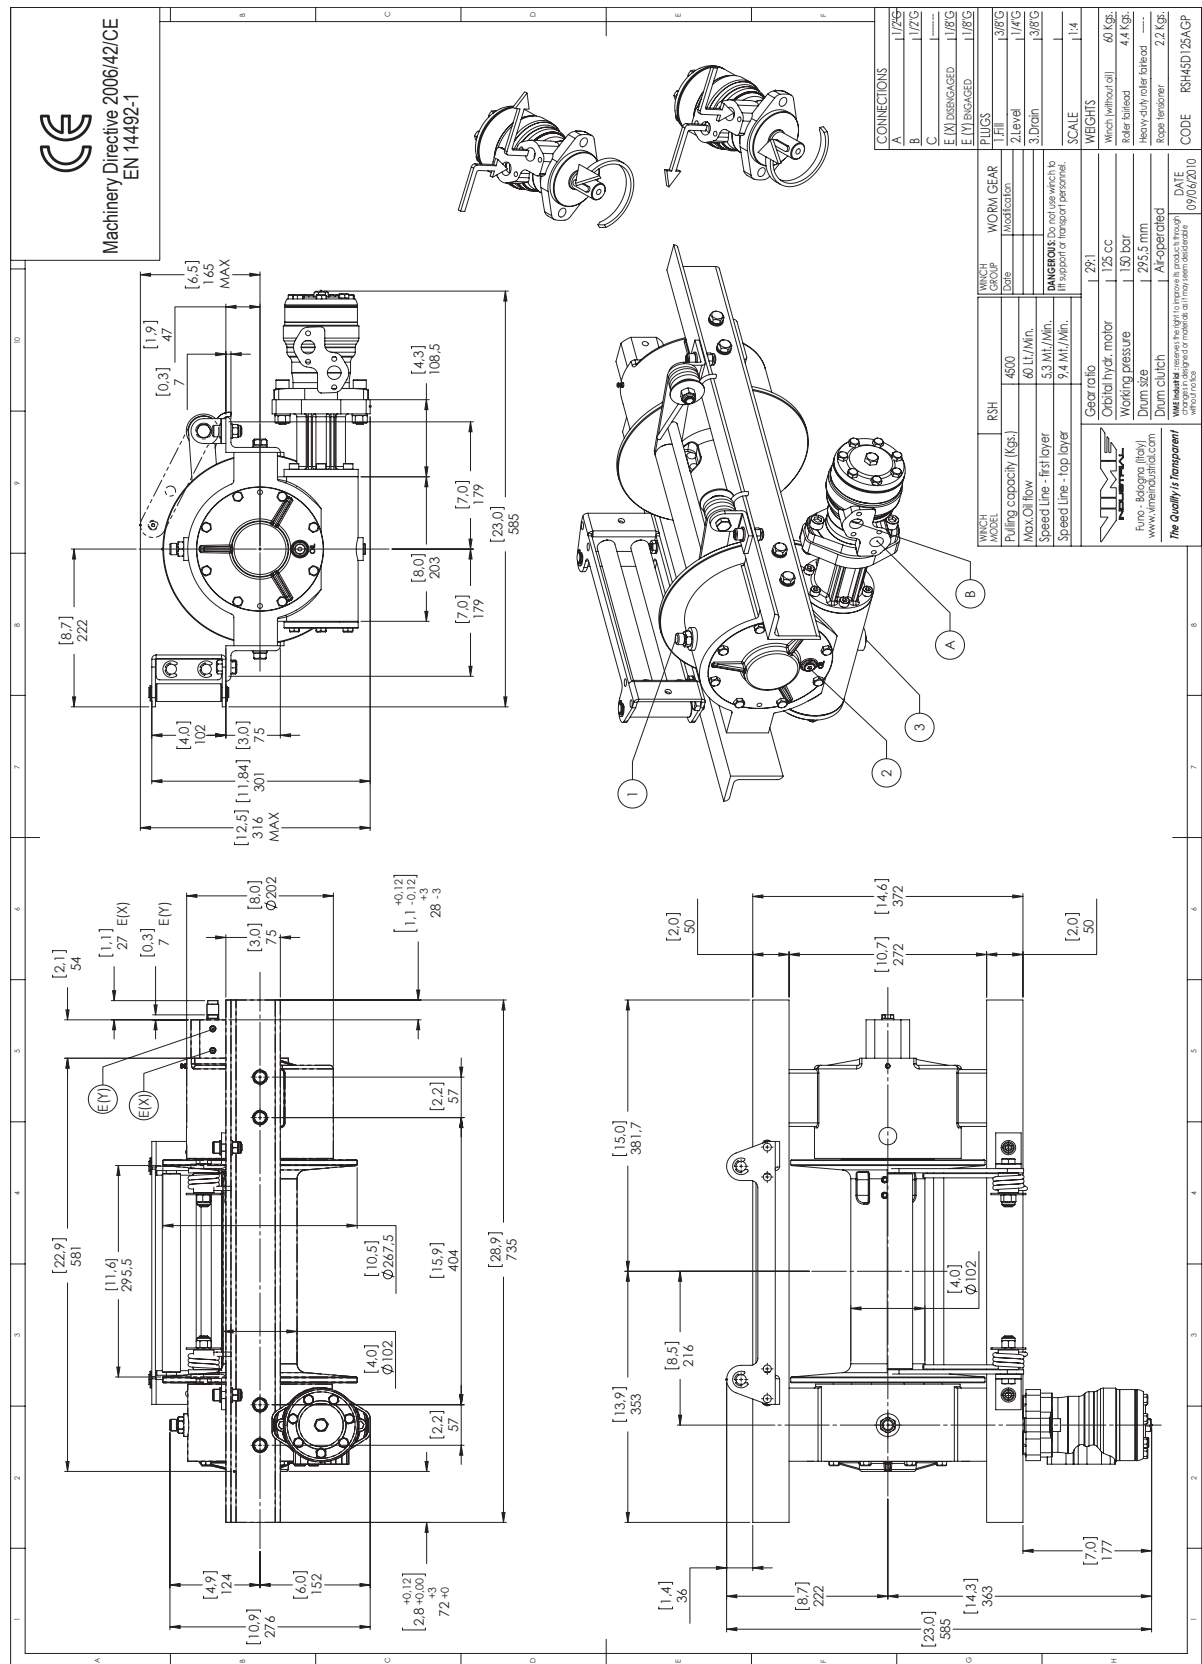


1.4.6 RSH 4500 WINCH TECHNICAL DATA

RATIO	WIRE ROPE SIZE [MM]	LAYER	LINE PULL
			[KGS.]
1/29	11*	1	4.500
		2	3.770
		3	3.240
		4	2.840
		5	2.530

OIL SUPPLY [LT/MIN]	DRUM REVOLUTION [RPM]	LINE SPEED [MT/MIN]				
		1	2	3	4	5
30	7,3	2,6	3,1	3,6	4,1	4,6
40	9,7	3,4	4,1	4,8	5,5	6,1
60	14,9	5,3	6,3	7,3	8,4	9,4

WIRE ROPE MINIMUM BREAKING LOAD EN 14492-1 [KG]	9.000
---	-------

LAYER	DRUM DIAMETER		WIRE ROPE ON LAYER		WIRE ROPE QUANTITY	
	Ø MM		[MT]		[MT]	
	Ø MM	11 MM	00 MM	11 MM	00 MM	00 MM
8	267	-	21,7	-	123,5	-
7	245	-	19,9	-	101,8	-
6	223	-	18,1	-	81,9	-
5	201	-	16,3	-	63,8	-
4	179	-	14,5	-	47,5	-
3	157	-	12,8	-	32,9	-
2	135	-	11,0	-	20,2	-
1	113	-	9,2	-	9,2	-
0	102	-	-	-	-	-

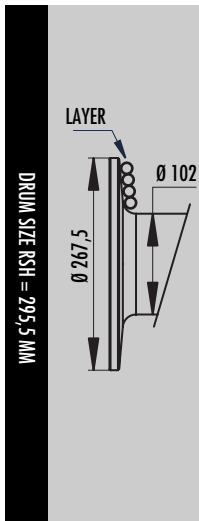

WIRE ROPE CAPACITY [MT]		MAX. WIRE ROPE CAPACITY EN 14492-1 [MT]		MAX. WIRE ROPE CAPACITY [MT]	
11 MM	00 MM	11 MM	00 MM	11 MM	00 MM
30	00	81**	00	123	00

DESCRIPTION	WEIGHT
	[KGS.]
WINCH (WITH STANDARD ROLLER FAIRLEAD AND WITHOUT CABLE)	60
ACCESSORY : HEAVY-DUTY ROLLER FAIRLEAD	9,6
ACCESSORY : CABLE TENSIONER	2,2

NOTE

Specifications are subject to change without notification and without incurring obligation. Specifications in this publication are theoretical and may vary depending on hydraulic system, environment, etc.


NOTE

*Wire rope size must be respected. Recommended wire rope min. tensile strength 2160 N/mm².
Wire rope minimum breaking load must be at least double of winch max. pulling capacity.


** Max. wire rope capacity according with EN 14492-1.

1.4.7 RSH 4500 WINCH PERFORMANCE CHARTS AT THE 1ST LAYER

LINE PULL-FIRST LAYER [KGS]

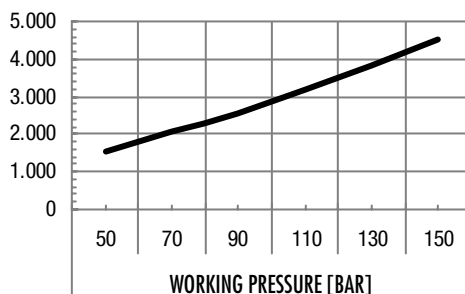

LINE SPEED [MT/MIN]

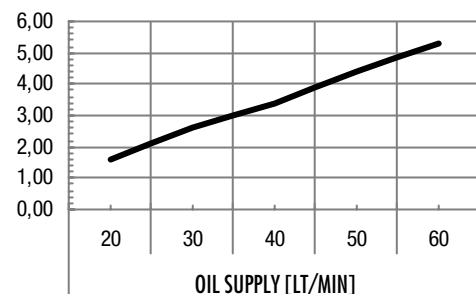



1.4.9 RSH 5250 WINCH TECHNICAL DATA


RATIO	WIRE ROPE SIZE [MM]	LAYER	LINE PULL
			[KGS.]
1/29	11*	1	5.250
		2	4.395
		3	3780
		4	3315
		5	2950

OIL SUPPLY [LT/MIN]	DRUM REVOLUTION [RPM]	LINE SPEED [MT/MIN]				
		1	2	3	4	5
30	7,3	1,8	2,2	2,6	2,9	3,3
40	9,7	2,8	3,4	4,0	4,5	5,1
60	14,9	4,3	5,1	5,9	6,8	7,6

WIRE ROPE MINIMUM BREAKING LOAD EN 14492-1 [KG]	10.500
---	--------

LAYER	DRUM DIAMETER		WIRE ROPE ON LAYER		WIRE ROPE QUANTITY	
	Ø MM		[MT]		[MT]	
	Ø MM		11 MM	00 MM	11 MM	00 MM
8	267	-	21,7	-	123,5	-
7	245	-	19,9	-	101,8	-
6	223	-	18,1	-	81,9	-
5	201	-	16,3	-	63,8	-
4	179	-	14,5	-	47,5	-
3	157	-	12,8	-	32,9	-
2	135	-	11,0	-	20,2	-
1	113	-	9,2	-	9,2	-
0	102	-	-	-	-	-

DRUM SIZE RSH = 293,5 MM

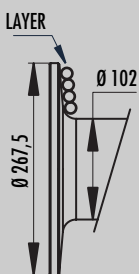

WIRE ROPE CAPACITY [MT]		MAX. WIRE ROPE CAPACITY EN 14492-1 [MT]		MAX. WIRE ROPE CAPACITY [MT]	
11 MM	00 MM	11 MM	00 MM	11 MM	00 MM
30	00	81**	00	123	00

DESCRIPTION	WEIGHT
	[KGS.]
WINCH (WITH STANDARD ROLLER FAIRLEAD AND WITHOUT CABLE)	60
ACCESSORY : HEAVY-DUTY ROLLER FAIRLEAD	9,6
ACCESSORY : CABLE TENSIONER	2,2

NOTE

Specifications are subject to change without notification and without incurring obligation. Specifications in this publication are theoretical and may vary depending on hydraulic system, environment, etc.


NOTE

*Wire rope size must be respected. Recommended wire rope min. tensile strength 2160 N/mm².
Wire rope minimum breaking load must be at least double of winch max. pulling capacity.


** Max. wire rope capacity according with EN 14492-1.

1.4.10 RSH 5250 WINCH PERFORMANCE CHARTS AT THE 1ST LAYER

LINE PULL-FIRST LAYER [KGS]

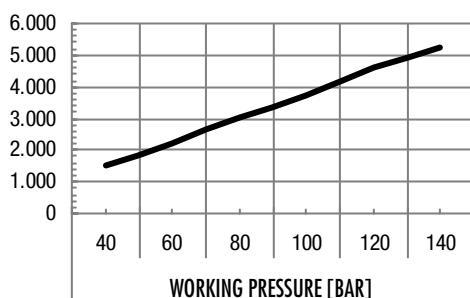

LINE SPEED [MT/MIN]

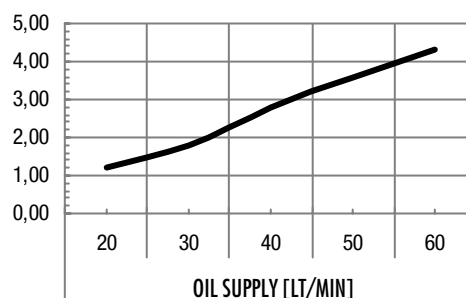




1.4.12 RCH 4500 WINCH TECHNICAL DATA

RATIO	WIRE ROPE SIZE [MM]	LAYER	LINE PULL
			[KGS.]
1/29	11*	1	4.500
		2	3.720
		3	3.170
		4	2.760
		5	2.450

OIL SUPPLY [LT/MIN]	DRUM REVOLUTION [RPM]	LINE SPEED [MT/MIN]				
		1	2	3	4	5
30	7,3	1,9	2,2	2,6	3,0	3,4
40	9,7	2,9	3,5	4,1	4,7	5,3
60	14,9	4,3	5,2	6,1	7,0	7,9

WIRE ROPE MINIMUM BREAKING LOAD EN 14492-1 [KG]	9.000
---	-------

LAYER	DRUM DIAMETER		WIRE ROPE ON LAYER		WIRE ROPE QUANTITY	
	Ø MM		[MT]		[MT]	
	Ø MM		11 MM	00 MM	11 MM	00 MM
8	267	-	21,7	-	123,5	-
7	245	-	19,9	-	101,8	-
6	223	-	18,1	-	81,9	-
5	201	-	16,3	-	63,8	-
4	179	-	14,5	-	47,5	-
3	157	-	12,8	-	32,9	-
2	135	-	11,0	-	20,2	-
1	113	-	9,2	-	9,2	-
0	102	-	-	-	-	-

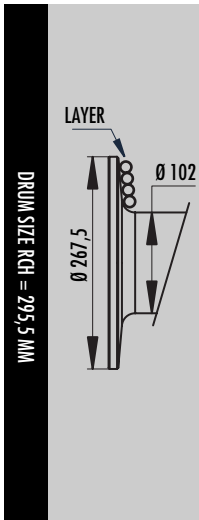

WIRE ROPE CAPACITY [MT]		MAX. WIRE ROPE CAPACITY EN 14492-1 [MT]		MAX. WIRE ROPE CAPACITY [MT]	
11 MM	00 MM	11 MM	00 MM	11 MM	00 MM
30	00	81**	00	123	00

DESCRIPTION	WEIGHT
	[KGS.]
WINCH (WITH STANDARD ROLLER FAIRLEAD AND WITHOUT CABLE)	58
ACCESSORY : HEAVY-DUTY ROLLER FAIRLEAD	9,6
ACCESSORY : CABLE TENSIONER	2,2

NOTE

Specifications are subject to change without notification and without incurring obligation. Specifications in this publication are theoretical and may vary depending on hydraulic system, environment, etc.


NOTE

*Wire rope size must be respected. Recommended wire rope min. tensile strength 2160 N/mm².
Wire rope minimum breaking load must be at least double of winch max. pulling capacity.


** Max. wire rope capacity according with EN 14492-1.

1.4.13 RCH 4500 WINCH PERFORMANCE CHARTS AT THE 1ST LAYER


LINE PULL-FIRST LAYER [KGS]

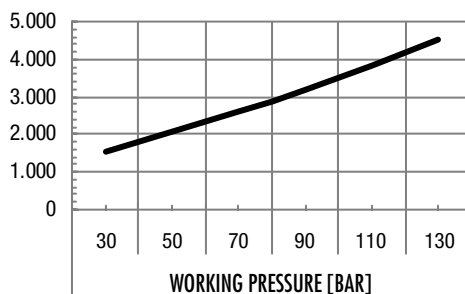

LINE SPEED [MT/MIN]

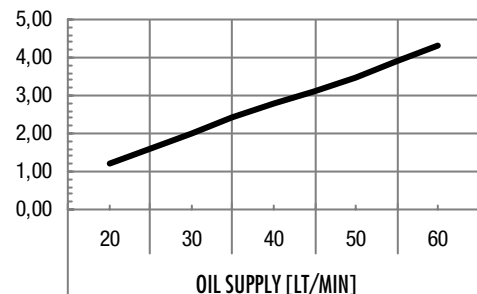

1.4.14 RCH 5250 WINCH DIMENSIONAL DATA

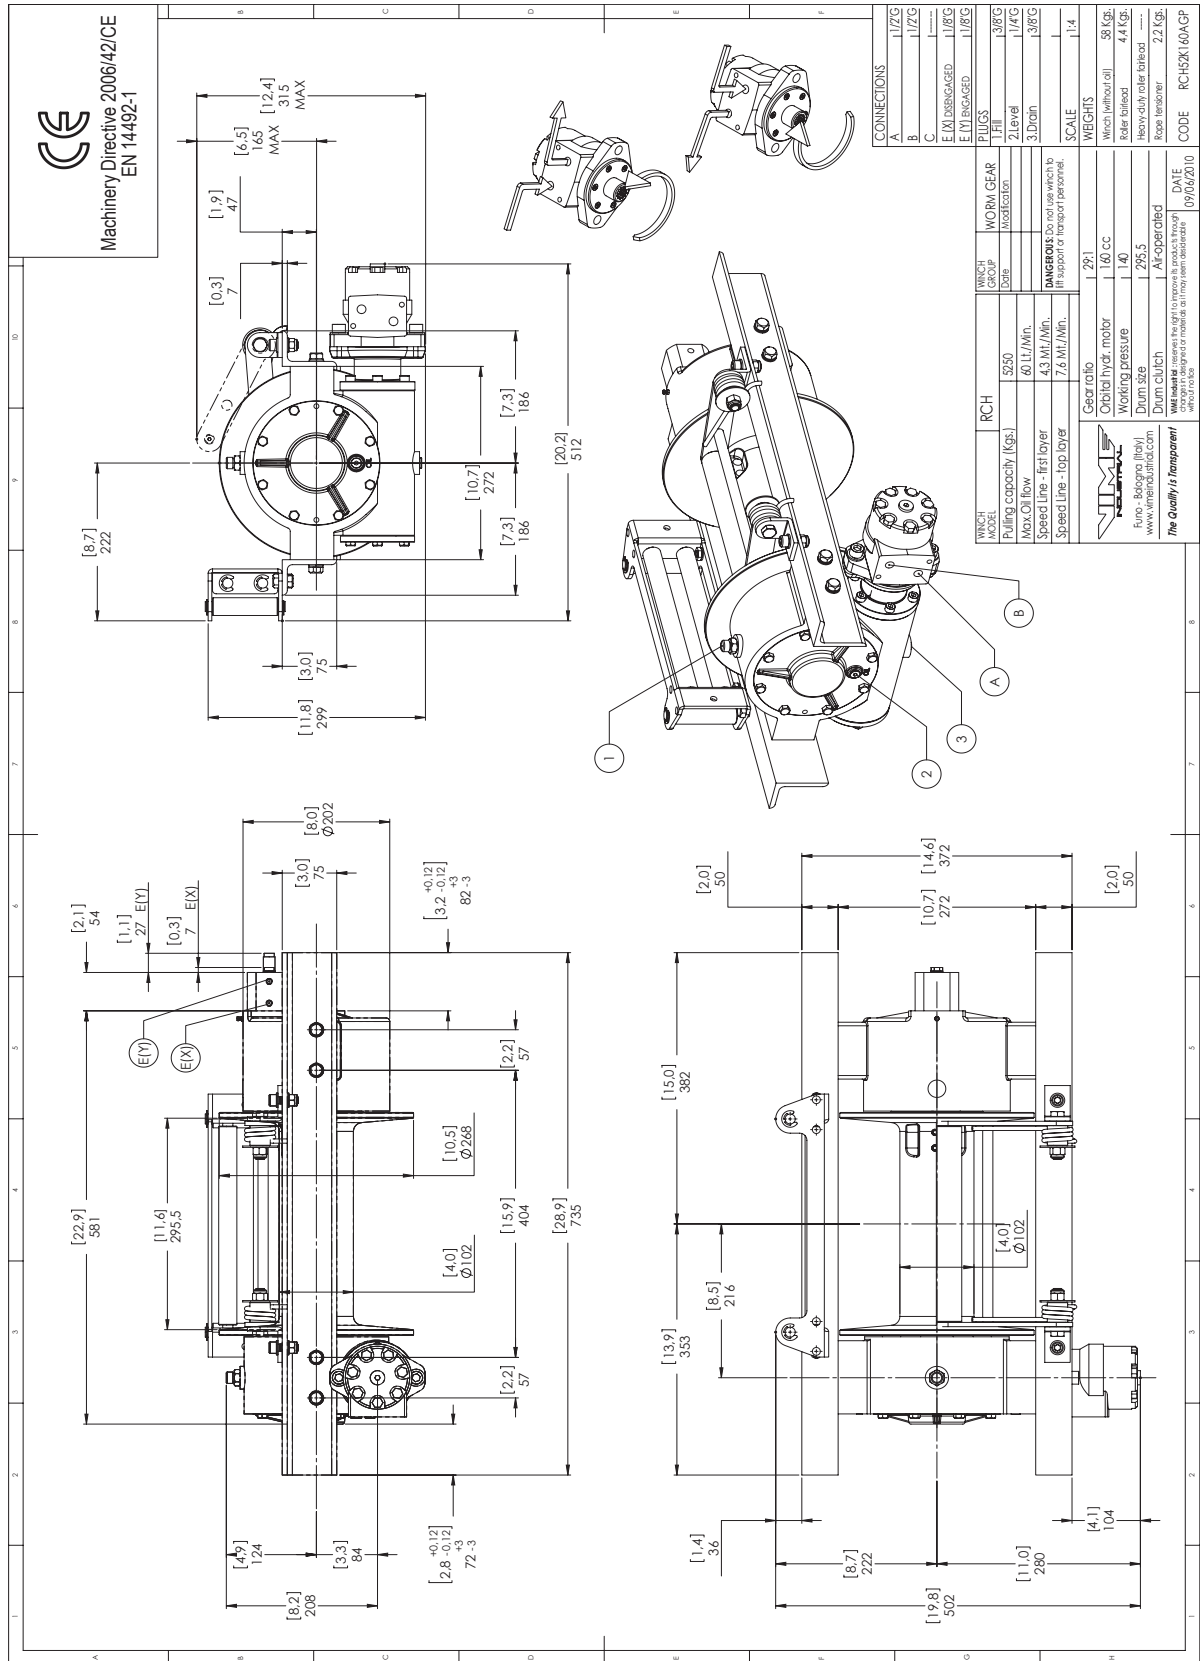


1.4.15 RCH 5250 WINCH TECHNICAL DATA

RATIO	WIRE ROPE SIZE [MM]	LAYER	LINE PULL
			[KGS.]
1/29	11*	1	5.250
		2	4.395
		3	3780
		4	3315
		5	2950

OIL SUPPLY [LT/MIN]	DRUM REVOLUTION [RPM]	LINE SPEED [MT/MIN]				
		1	2	3	4	5
30	7,3	1,8	2,2	2,6	2,9	3,3
40	9,7	2,8	3,4	4,0	4,5	5,1
60	14,9	4,3	5,1	5,9	6,8	7,6

WIRE ROPE MINIMUM BREAKING LOAD EN 14492-1 [KG]	10.500
---	--------

LAYER	DRUM DIAMETER		WIRE ROPE ON LAYER		WIRE ROPE QUANTITY	
	Ø MM		[MT]		[MT]	
	Ø MM		11 MM	00 MM	11 MM	00 MM
8	267	-	21,7	-	123,5	-
7	245	-	19,9	-	101,8	-
6	223	-	18,1	-	81,9	-
5	201	-	16,3	-	63,8	-
4	179	-	14,5	-	47,5	-
3	157	-	12,8	-	32,9	-
2	135	-	11,0	-	20,2	-
1	113	-	9,2	-	9,2	-
0	102	-	-	-	-	-

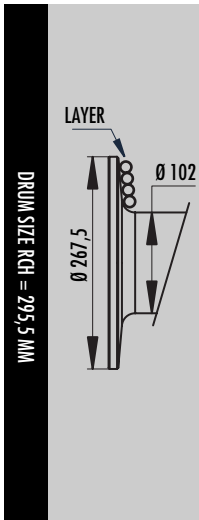

WIRE ROPE CAPACITY [MT]		MAX. WIRE ROPE CAPACITY EN 14492-1 [MT]		MAX. WIRE ROPE CAPACITY [MT]	
11 MM	00 MM	11 MM	00 MM	11 MM	00 MM
30	00	81**	00	123	00

DESCRIPTION	WEIGHT
	[KGS.]
WINCH (WITH STANDARD ROLLER FAIRLEAD AND WITHOUT CABLE)	58
ACCESSORY : HEAVY-DUTY ROLLER FAIRLEAD	9,6
ACCESSORY : CABLE TENSIONER	2,2

NOTE

Specifications are subject to change without notification and without incurring obligation. Specifications in this publication are theoretical and may vary depending on hydraulic system, environment, etc.


NOTE

*Wire rope size must be respected. Recommended wire rope min. tensile strength 2160 N/mm². Wire rope minimum breaking load must be at least double of winch max. pulling capacity.


** Max. wire rope capacity according with EN 14492-1.

1.4.16 RCH 5250 WINCH PERFORMANCE CHARTS AT THE 1ST LAYER


LINE PULL-FIRST LAYER [KGS]

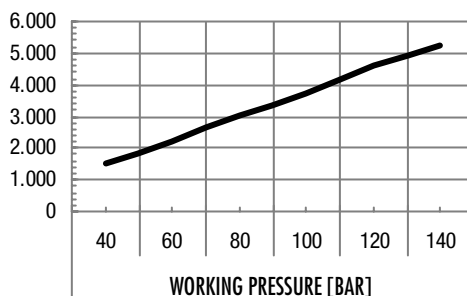

LINE SPEED [MT/MIN]

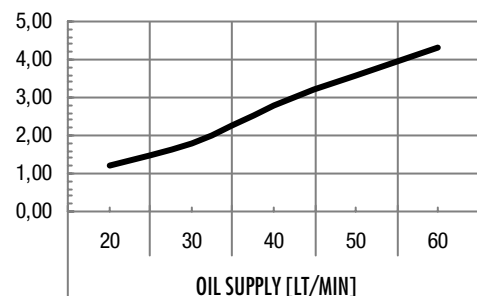

1.5 WINCH DECALS. SAFETY ADVICES

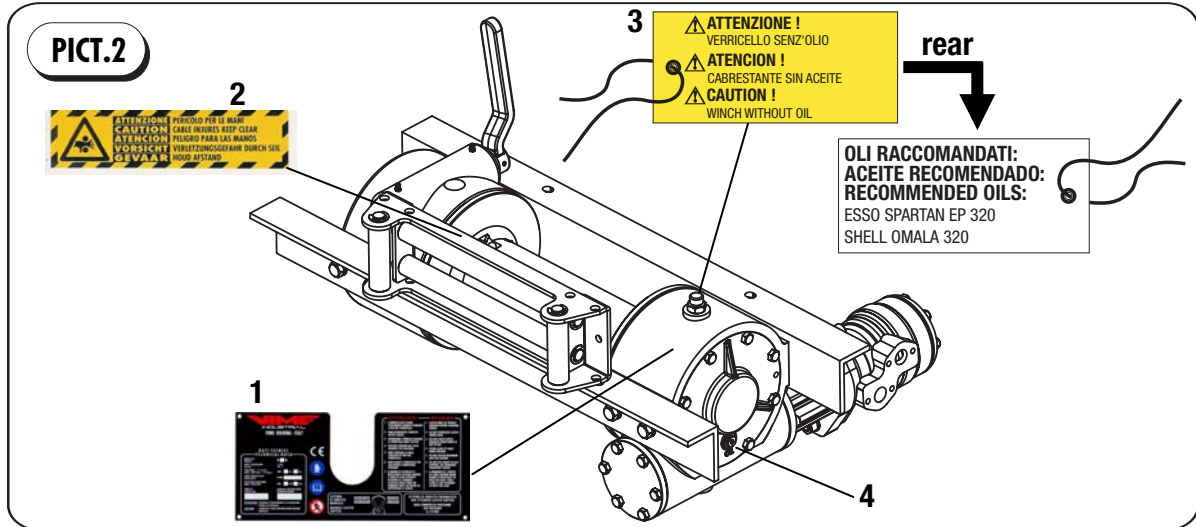

A decal (1), onto the top of the worm gear housing end gives: winch model, max pulling capacity at 1st layer, wire rope diameter according to the rule, working pressure, serial number and year of built. A yellow sticker (2) onto the roller fairlead, warns about rotating parts.

draumatic motor or if not included its adapter, are fitted onto the gear housing as shown in winch picture on manual's cover, and without the oil in the worm gear housing as warned by the yellow label (3), who gives in its back the recommended oils. If label (3) is missed, inspect oil level, through oil level plug (4).

■ IMPORTANT

When ordering replacement parts or contact VIME's customers service, please give winch model and serial number.

Winch can be supplied with or without the orbital hydraulic motor. In both ways, if not specified in the commitment, the orbital hy-

■ IMPORTANT


If decals are damaged or unreadable, replace it.

1.6 CONDITIONS OF SALE

The winch, except special customer requirements is delivered assembled and tested. Wire rope and hook are not included in the standard winch version, only if required are included in the commitment. At the delivery, open carefully the packing. Inspect the winch and see if it is free from defects.

■ IMPORTANT

In case of damages or missing parts, inform transporter immediately.

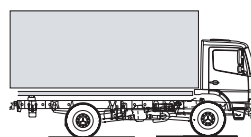

1.6.1 PACKAGING

The standard packaging, if supplied, and unless otherwise agreed, is not rainproof and is intended for shipping by ground and not sea, and for areas which are under cover and not humid.




IMPORTANT

Dispose of packaging materials as stipulated by the applicable legislation.



1.6.2 PACKAGING ILLUSTRATION

PICT.3

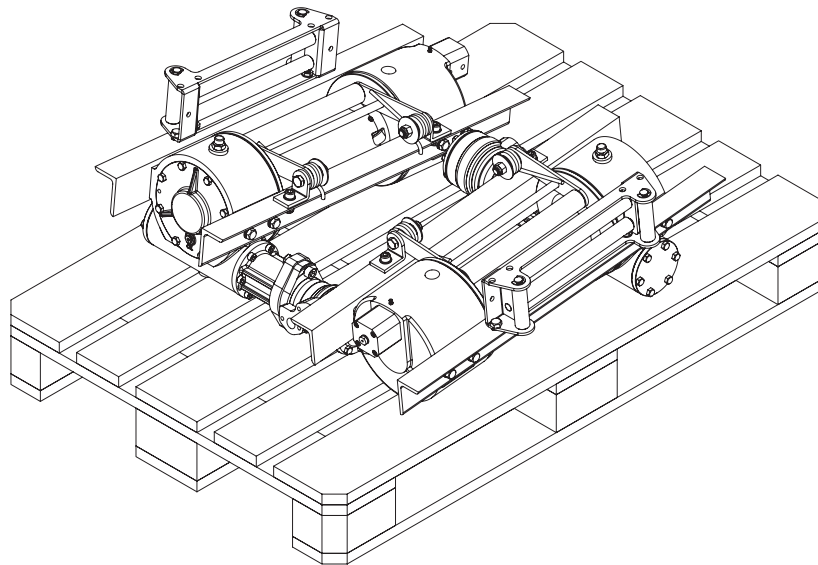

NOTE

Winches in carton box on pallet are wrapped with plastic film. About its rainproof capacity, refer what indicated above.

1.7 SAFETY PROCEDURES

Do not operate this winch until you have carefully read and understand the warnings operation sections of this manual.



WARNING

Winch use allowed by trained personnel only.



DANGEROUS



When winching is obligatory wear working gloves.

1. Manual or air-clutch must be fully engaged before starting the winch.
2. Do not disengage manual or air clutch under load.
3. Leave the clutch disengaged when the winch is not in use (for manual clutch version only).
4. Do not exceed maximum line pull ratings.
5. In car carrier applications after pulling vehicle on carrier, be sure to secure vehicle to carrier bed. Do not maintain load on winch cable while transporting vehicle. Do not use winch as a tie down.



WARNING



Do not use winch to lift, support or otherwise transport personnel.



DANGEROUS



A minimum of 5 wraps of cable around drum barrel are recommended.



DANGEROUS



When pulling a load, the suddenly cable failure or either the hook failure gives a dangerous snap back of broken cable. Operators must stay clear of cable when pulling.



DANGEROUS

Accessories such as roller fairlead and cable tensioner are a natural drum protection. A yellow sticker (ref.2 pict.2 chapter1.5) on roller fairlead warns about rotating parts. In case of winch purchasing without accessories, winch drum must be protected by a cover. Protection will be fitted by the installer according to the winch mounting.

SECTION 2 MOUNTING




2.1 ROAD TRAFFIC

Winch must be mounted on vehicles in compliance with regulation. Many countries require to keep up to date with traffic card.

Do not drive vehicle not in compliance with regulation or not up dated traffic card.

2.2 WINCH MOUNTING

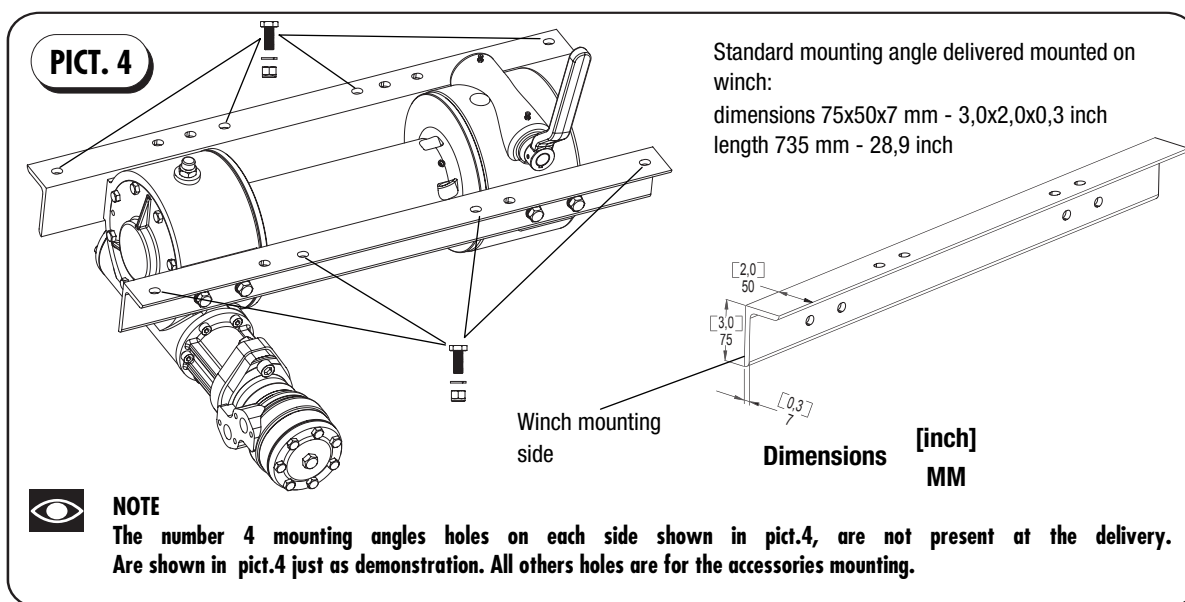


Winches mod. **RH** are designed to be mounted on vehicles frame. The winch base angles should be securely mounted to the vehicle frame in manner acceptable to the vehicle manufacturer. It is responsibility of the person (s) installing the winch to make certain that the winch is secured to the vehicle with equivalent or greater strength capscrews than VIME Industrial used to secure the winch to the base angles. The winch must be fitted horizontally to give best lubrication and securely mounted on a surface who resist to the winch pulling, without having any flex within the base and winch while in use.



IMPORTANT

Winch is built up for different model of trucks. Holes on the mounting angles are present, installer will make it, taking care in consideration the right winch position on the truck.

Winch can be mounted without the mounting angles.

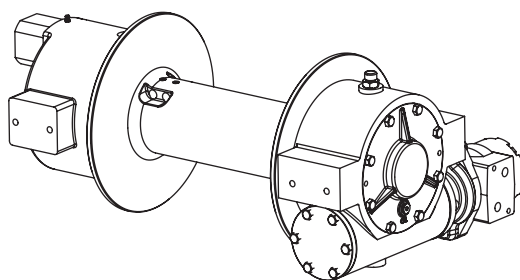

Winch must no be mounted directly onto the vehicle chassis, it should be better mounting a frame adapter brackets who can resist to the winch pulling. Mounting hole locations, size and thread depth are specified for every winch (pict.5-6).

WARNING

Winch must no be mounted directly onto the vehicle chassis.



WARNING

All mounting holes patterns should be used to bolt the winch.




WARNING

Use the mounting hole locations provided on the dimensional data pair dimensions of surfaces must be respected. A wrong winch mounting reduce winch performance, cause overheating, excessive wear and could damage the winch.


PICT.5

mod. RNH

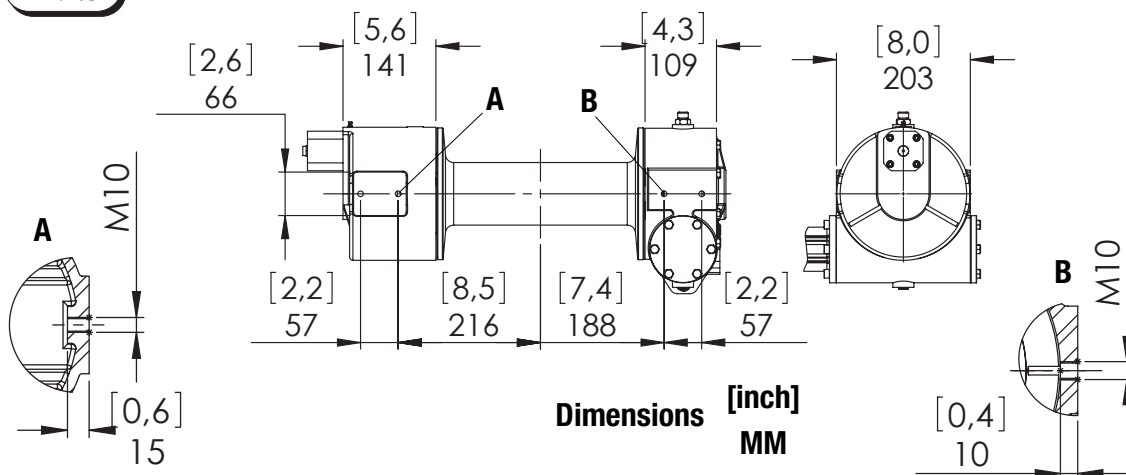


PICT. 6

mod. RSH-RCH

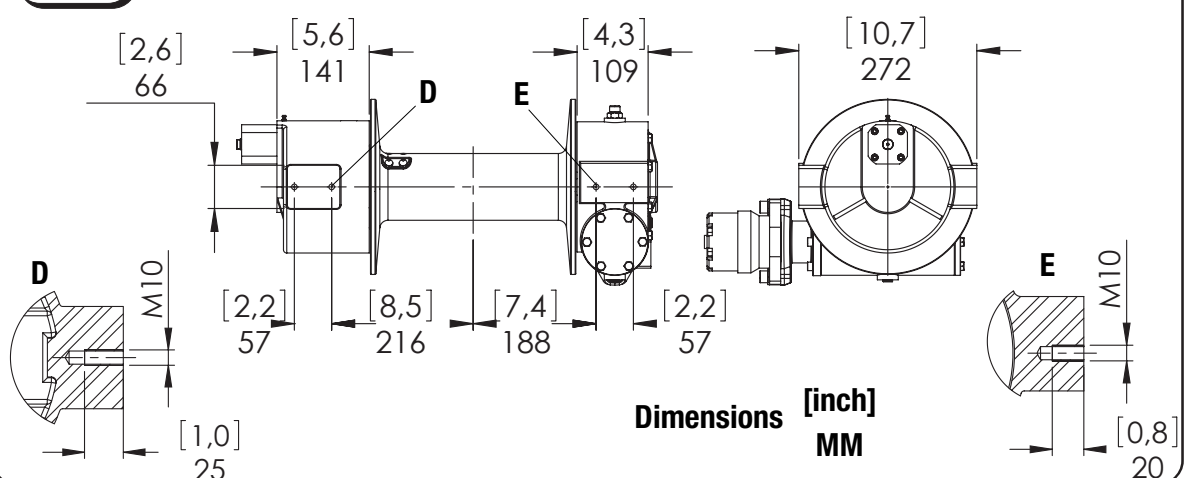

2.3 FLEET ANGLE

PICT.7

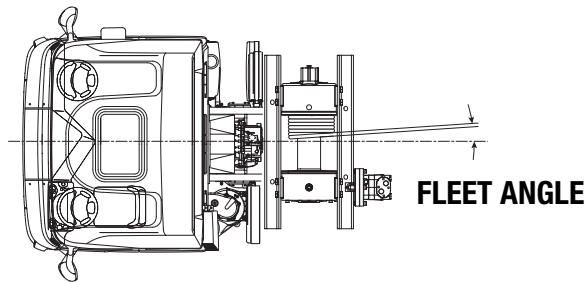

Winch should be mounted as close to centre and as perpendicular as possible to the direction of the line pull. This will keep the wire rope fleet angle centred onto the drum as small as possible.



DANGEROUS

If the proper fleet angle is not main-





WARNING

tained, the wire rope could wind onto one side of the drum. This could cause failure of the winch or wire rope, resulting in damage, injury or death.

A wrong or inadequate winch mounting could damage the winch.

2.4 WINCH MOUNTING ANGLES

PICT.8

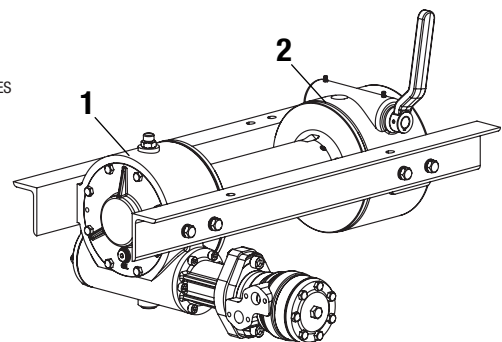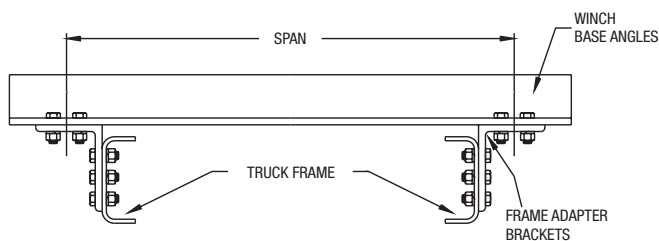

To fit the winch on vehicle chassis it should be better mounting a frame adapter brackets bolted to the winch base angles as close to the gear housing (1) and clutch housing (2) as practicable (SPAN distance) shown in pict.8. This method would provide the greatest strength and minimize distortion by using frame adapter brackets not inferior to the base angles



WARNING

Winch must no be mounted directly onto the vehicle chassis.

IMPORTANT

In the winch mounting, check the gear housing end (1) clutch housing end (2) (pict.9), are properly aligned for not compromising the winch working.

WARNING

Excessive gear and bushing wear, difficult in drum freespooling, lowest winch performance are usually symptoms of misalignments.


IMPORTANT

At the end of winch mounting, check winch alignment; with drum disengaged manually turn winch drum. A visual check could be done, inspecting the distance between drum flanges (7) and gear housing end (1) see view A, reference (8).

NOTE


Turn by hands the drum, a certain resistance will be given by teflon discs (ref.9) who breaking onto the drum lateral flange, to avoid in the freespooling a cable birdnests.

PICT.9

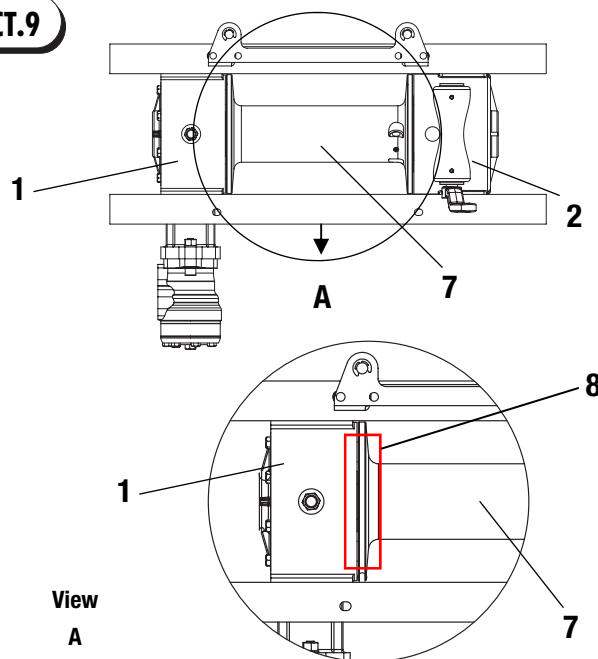

NOTE

The no. 2 brake discs and springs here shown, are not visible, while winch is assembled. Pictures shown are just as demonstration.

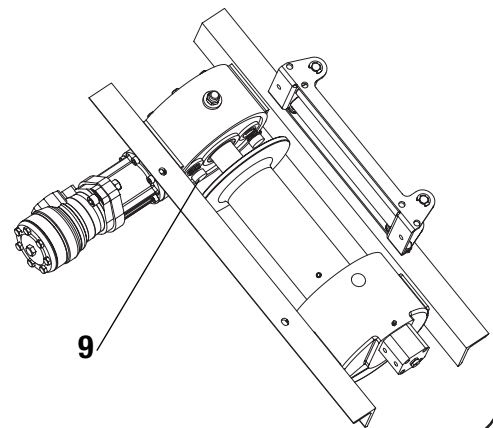


2.5 HYDRAULIC SYSTEM

Once the winch has been mounted onto the vehicle chassis (chapter 2.2-2.3-2.4), should be connected to the hydraulic circuit according to the typical lay-out shown below. If conditions where the hydraulic system has only a winch which is used intermittently, where ambient temperature are moderate,

and where excessive back pressure or internal leakage are not present, a reservoir equal in size to the flow of the system can be used. Hose lengths should be kept as short as possible. Sharp bends in hoses and tubing and 90 degree fittings, should be avoided since they increase back pressure.

PICT.10

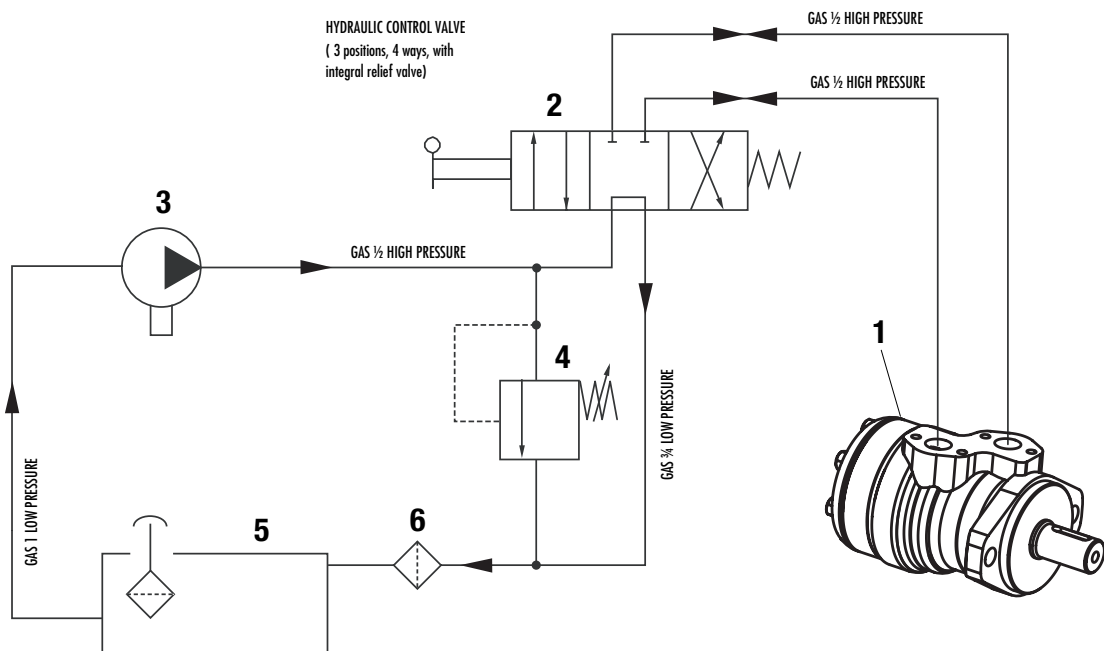

NOTE

Hydraulic system shown in pict.10, is not included in winch equipment.

- | | |
|----------------------------|--|
| 1. ORBITAL HYDRAULIC MOTOR | 4. RELIEF VALVE |
| 2. HYDRAULIC CONTROL VALVE | 5. FLUID RESERVOIR |
| 3. HYDRAULIC PUMP | 6. FILTER: 40 µm / 25 µm - 20 µm / 10 µm |



WARNING

Do not exceed 60 Lt/min. If exceeded hydraulic motor may be damaged.



WARNING

The relief valve (ref.4 pict.10) must be set so the pressure supplied to the winch doesn't exceed the pressure rating of the winch. If the pressure or flows exceeds those rated for the winch, it could cause damage to the winch, to the wire rope or damage to property, personal injury or death.



IMPORTANT

Hydraulic pressure or flows lowest than those rated for the winch will result in lower line pull or lower line speed.



WARNING

The hydraulic orbital motor mounted on model RNH, RSH and RCH no need any drainage line, even if there is a back pressure in return line, because equipped with high pressure shaft seal.

But in case of excessive back pressure in return line, higher than oil seal tolerable, or rapid drum inversion with load : a drain line directly to oil reservoir is recommended.



WARNING

Rapid drum inversion with load, could damaged the hydraulic orbital motor.



WARNING

Winch control devices should be positioned for safe operation of the winch without hesitation or lost of time.



IMPORTANT

Winch control devices are at exclusive charge of the installer, who will also take care to place all decals, to indicate the different winch function to avoid any misunderstanding to the winch operator while winching.

OIL TYPES: Mineral hydraulic oils are recommended with anti-wear additives, type HLP [DIN 51524 (part.2)] or HM [ISO 6743/4]. The use of different oils, hydraulic motor company must be contacted.

TEMPERATURE: When selecting hydraulic oils , it is very important consider the operating temperature of the hydraulic system. Oil temperature should lie between +30°C [+85°F] ed i +60°C [+140°F]. As a general rule, oil life is halved for each +8°C [+15°F] its temperature exceeds 60°C [+140°].


VISCOSITY: The viscosity of the oil should lie between 20 mm²/S and 75 mm²/S [100 e 370 SUS] when the operating temperature of the system has become stabilized. We recommend the use of an oil type having a viscosity of 35 mm²/S [165 SUS].

FILTERING: It is necessary to keep the level of oil contamination at an acceptable level to ensure problem-free operation. To maintain a correct level of cleaning is necessary a return filter of 40 µm absolute or 25 µm nominal. In very dirty environments, in complex systems, the recommended filtration is 20 µm absolute or 10 µm nominal. In any case should refer to

the vehicle hydraulic system designer recommendation where the winch will be mounted, also about maintenance.

2.6 HYDRAULIC MOTOR LINKAGE

PICT.11

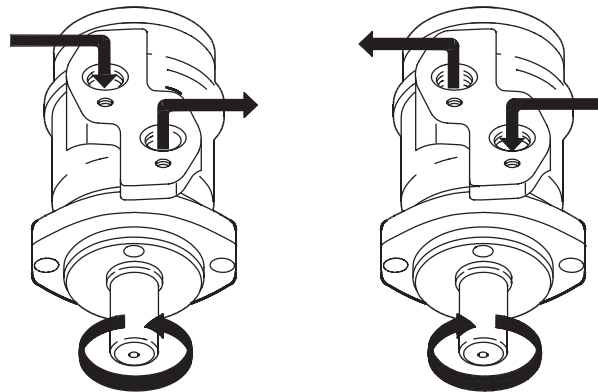

According to the orbital hydraulic motor plumbing, its shaft will turn in clockwise or counter clockwise, that's will determine a different winch drum rotation (pict.11).

Winches model RH are equipped with a worm gear drive train, who doesn't have pre-determined and obligatory drum pulling direction, who can be set in clockwise or counter clockwise direction.



NOTE

If the winch is equipped with accessories such as : Heavy-duty roller Fairlead and Cable tensioner, these are fitted, without

any indication in the winch order, as shown in this instruction maintenance manual.

2.7 AIR-OPERATED FREESPOOL LINKAGE

The winches mod. RH can be equipped (on request) with air clutch shifter for drum freespooling DUAL ACTION. **The pneumatic system works if air system is available on vehicle only.**

Connect the air cylinder ports size G 1/8 as shown (ref. E pict.12) to the lever valve (see lay out pict.12a).

HOW IT WORKS:

Air flow through (X) port **disengages** the drum.

Air flow through (Y) port within spring returns **engages** the drum.

moisture from entering the winch. Moisture could cause corrosion. If temperature fall down below 0°, moisture could freeze and render the component inoperable. System works at the minimum pressure 6 bar. Pressure must not exceed 10 bar. The pneumatic system can works with temperature between -20°C and + 80°C .



WARNING


Not utilize the proper air filters, could damage the pneumatic clutch, and compromise its function.



IMPORTANT

For efficient operation of air-cylinder clutch shifter , utilize air pressure filtered and dried. It is important to keep


PICT.12

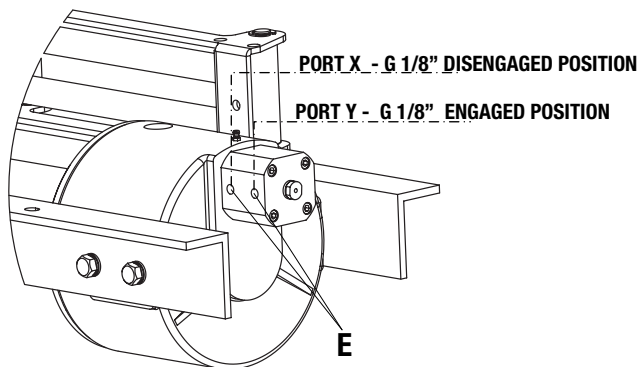

NOTE

The dual action pneumatic lever valve and filter shown (see pict.12a), are not included in the winch standard equipment.

PICT.12a

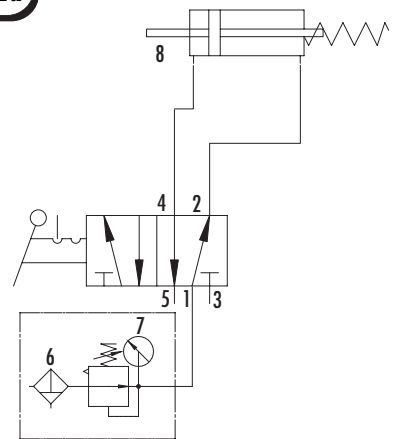

1. In let air pressure G 1/8"
2. Out let G 1/8"
3. Exhaust G 1/8"
4. Out let G 1/8"

5. Exhaust G 1/8"
6. Filter (50 µm)
7. Pressure regulator (min.6 bar max.10 bar)
8. Air cylinder for drum free spooling

2.8 CABLE INSTALLATION EN 14492-1

In the choice of cable to be fitted on drum for first time or to replace the old one, follow what is recommended by EN 14492-1:

- Cable breaking load double to winch max. rated capacity.
- Cable diameter equal to VIME recommended and according to EN 14492-1.

Cable anchor on drum has been designed EN 14492-1 compliant.




WARNING

Recommended wire rope min. tensile strength 2160 N/mm². Wire rope minimum breaking load must be at least double of winch max. pulling capacity.



WARNING

VIME has no responsibility for damages to the winch, to the rope or for physical injury to persons, animals or property damages given by unqualified cable use.

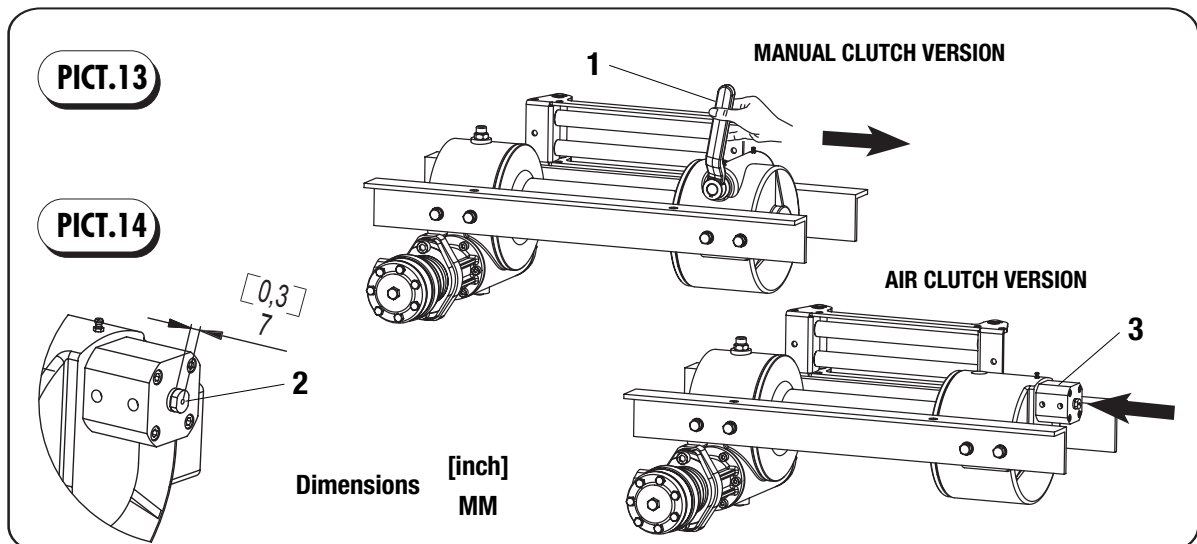

1. Determine the drum rotation. Worm gear winch has not a previous predetermined spooling direction of cable.

2. Check clutch be fully engaged, by inspecting:

MANUAL CLUTCH VERSION

The lever (1) (pict.13) must be in external position, if not pull out fully the lever.

AIR CLUTCH VERSION

Air-cylinder shaft (2) must be in position shown (pict.14). Differently operate the air-cylinder to engage clutch (chapter 3.1, page 34-35) while running slowly the winch drum.

3. Unwind cable by rolling it out along the ground to prevent kinking.

4. If the end of cable opposite hook has not been machined, wrap end of cable opposite hook with plastic or similar tape to prevent fraying. Follow steps indicated.

STEP 1

Insert the end of the rope (10) opposite the hook, into proper slot (A) as shown in pict.15.




DANGEROUS



When winching is obligatory wear working gloves.

PICT.15

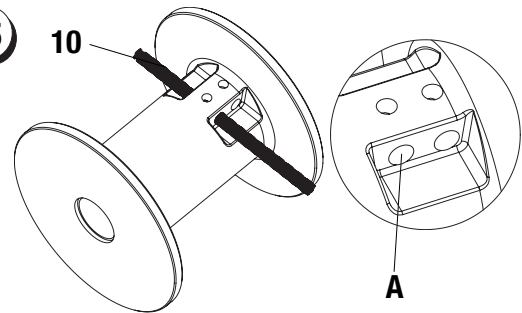

STEP 2

By bringing the end of rope (10) opposite to hook, wrap wire rope around drum barrel as shown in pict.16.




DANGEROUS



In rope winding be careful especially when hands are closed to drum and roller fairlead.



PICT.16

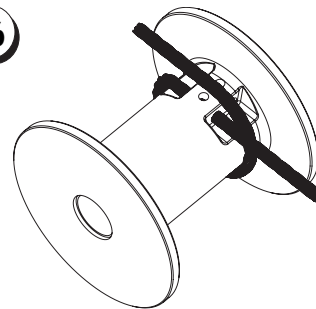

STEP 3

The end of rope (10) opposite to hook, must be insert in the second slot (B) as shown in pict.17.

PICT.17

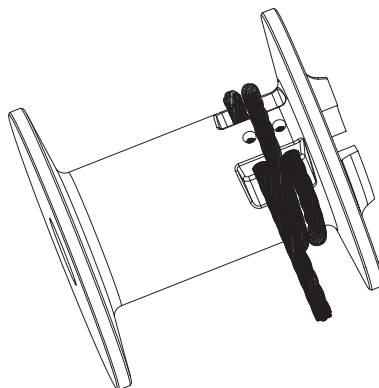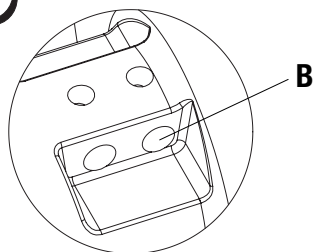




STEP 4

Thread set screw (12) into threaded hole to secure the end rope (10) opposite to hook as shown in pict.18.


PICT.18

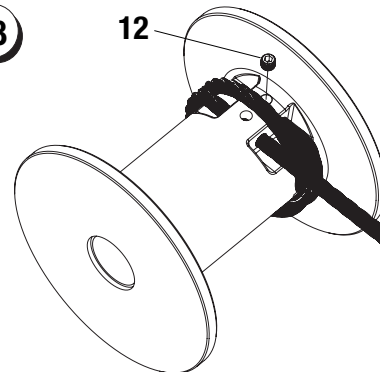

STEP 5

Manually pull the rope out as shown in pict.19 till rope will wrap onto the drum barrel.

PICT.19

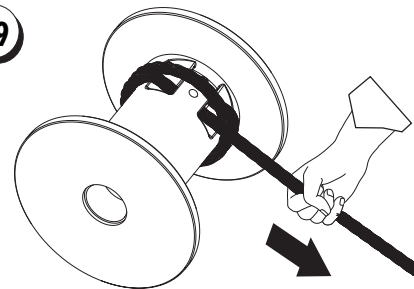

WARNING




When winching is obligatory wear working gloves.



STEP 6

By keeping rope tensioned as shown in pict.19 tighten safety set screw (13) as shown in pict.20.


PICT.20

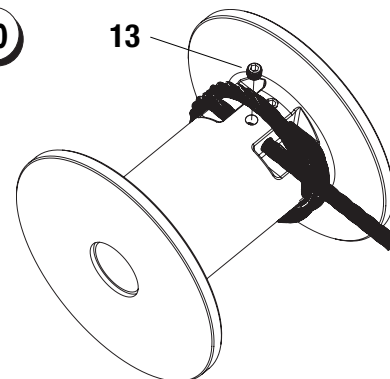

STEP 7

After having tightened safety set screw, start winding the wire rope.

PICT.21

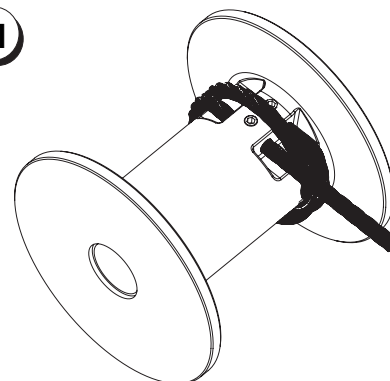



ROPE NOT PROPERLY MOUNTED



PICT.22

While mounting the end rope (10) opposite to hook, throughout (B) by using set screw (12), take care do not allow wire rope to extend past seat (C) of drum as shown in pict.22.




DANGEROUS

Never try to enlarge drum rope slots. VIME cannot be held responsible of failure to the drum, wire rope caused by this unauthorized intervention.

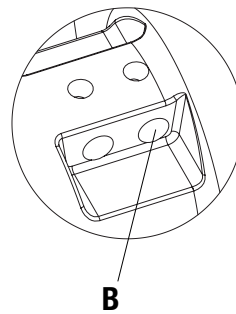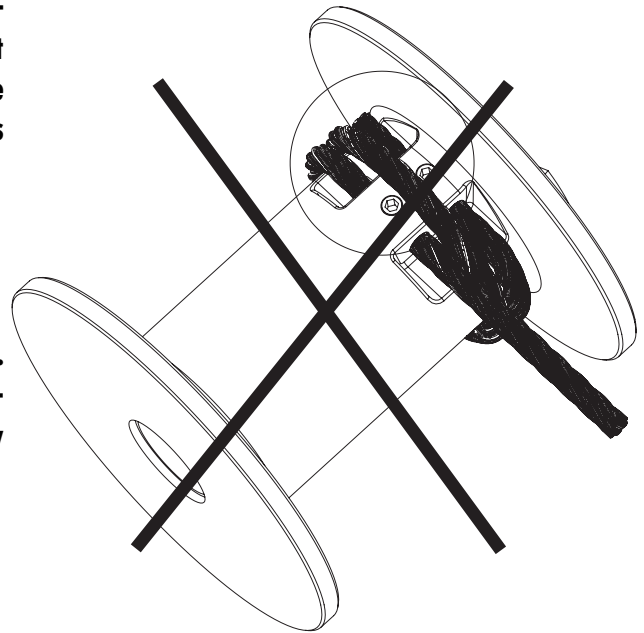


C

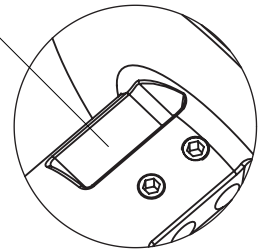

B

10

12

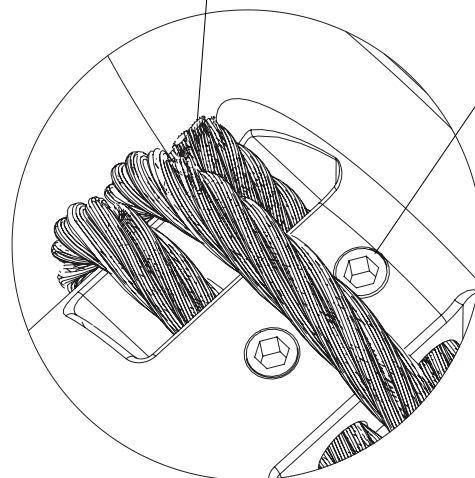

■ CORRECT WIRE ROPE MOUNTING

FIG.23

While mounting the end rope (10) opposite to hook, through hole (B) by using set screw (12), take care do not allow cable to extend past seat (C) of drum, as shown in pict.22.



DANGEROUS

In case of installing a wire rope with end opposite to hook cone tapered, is necessary to use the whole drum seat depth to allow set screw (12) clamp onto the wire rope and not onto the cone tapered.

5. Runs winch in the reel in direction. Keeping tension end of cable, spool the cable onto the cable drum taking care to form neatly wrapped layers.






DANGEROUS



When winding all cable onto the cable drum keeping tension on it by hand, when the end of cable is near to the drum, stop winch, disengage drum (chapter 3.1, pict.24). When the drum is disengaged, turn the drum by hands till the cable is completely winded. Take great care, when hands approach to the drum and roller fairlead.

6. Winch is ready.

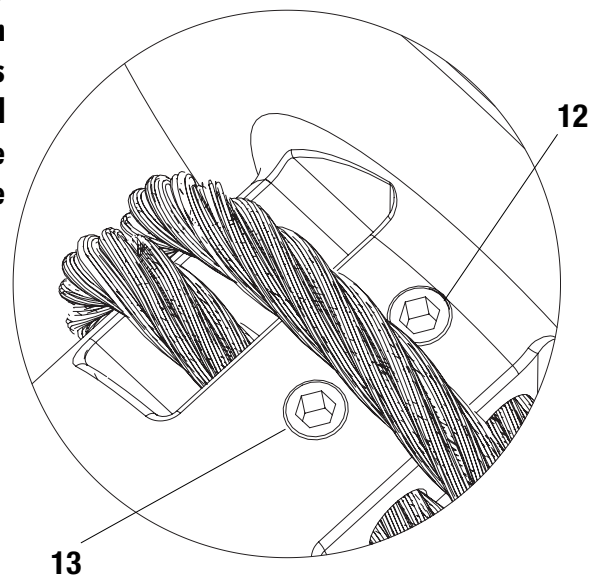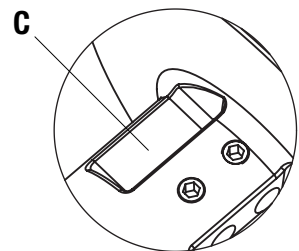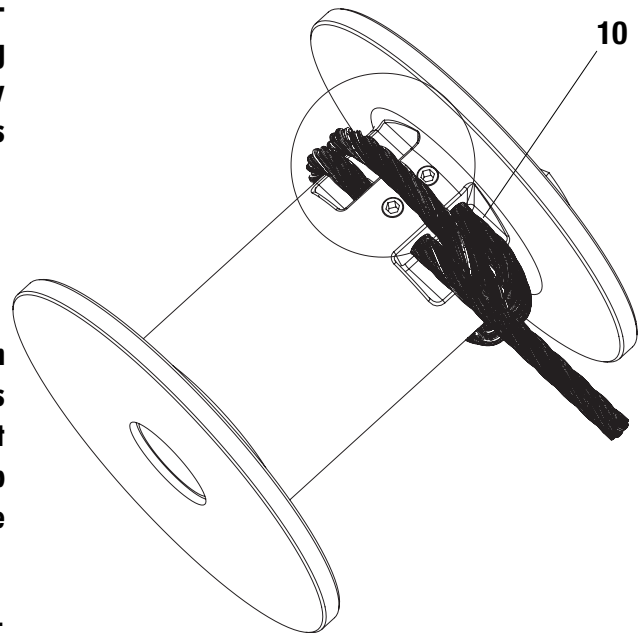

SECTION 3 OPERATION




3.1 OPERATION



DANGEROUS

Before starting winch check cable conditions, if cable becomes frayed with broken strands, replace immediately as described on chapter 2.8.

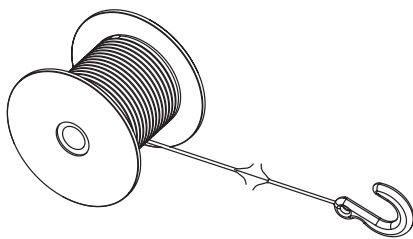

DANGEROUS



When winching is obligatory wear working gloves.



WARNING



Before operating check oil level and add oil, if necessary as shown in chapter 5.1.1.



WARNING


Before start winching, check conditions of manual or air clutch system for drum freespooling.



NOTE

A warm up procedure is recommended at each start up and is essential at ambient temperatures below +40°F (4°C). The prime mover should be run at its lowest recommended RPM, with manual or air clutch shifter disengaged, sufficient time to warm up the system. The winch should be operated at low speeds, forward and reverse, several times to circulate gear lubricant through the worm gear.

PICT.24

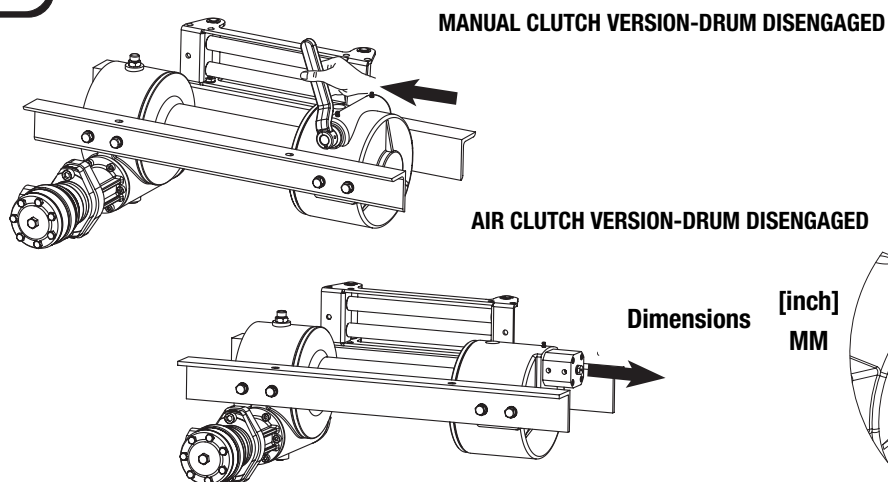


A) For hooking onto the load rapidly:

1. Check drum clutch be fully disengaged:
- a. **VERSION WITH MANUAL CLUTCH SHIFTER:** checking the lever being fully in, if not pull the lever fully in as shown (pict.24).
- b. **VERSION WITH AIR-CYLINDER CLUTCH SHIFTER:** checking the air-cylinder shaft being fully out (pict.24), if not act air lever valve.
2. Now freespool by manually pulling out enough wire rope for the winching operation, hook the load in a point who can resist to the traction.



DANGEROUS

A minimum of 5 wraps of cable around drum barrel is recommended.

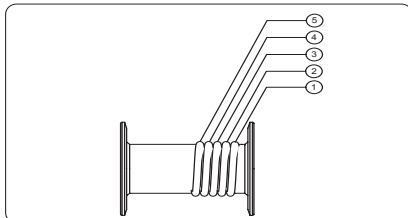

B) To pull the load:



WARNING

Do not exceed maximum line pull ratings.

1. Engage the drum :
- a. **VERSION WITH MANUAL CLUTCH SHIFTER:** checking the lever being in external position, if not pull the lever fully out as shown (pict.25).




WARNING

Check the action of the sliding clutch, making sure it is fully engaging with cable drum. Clutch is fully engaged when jaw clutch perfectly match jaw drum. To let jaws match together it could be necessary runs drum manually or by spooling out the cable till engaging or powering drum (short intermittence) in winding or unwinding direction. All these operations must be ran with no load.


- b. **VERSION WITH AIR-CYLINDER CLUTCH SHIFTER:** act air lever valve, air flow through Y port G1/8" (pict.25) engages drum.

PICT.25


MANUAL CLUTCH VERSION-DRUM ENGAGED

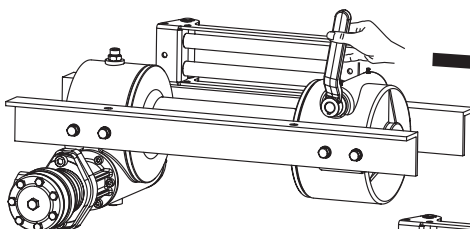

AIR CLUTCH VERSION-DRUM ENGAGED

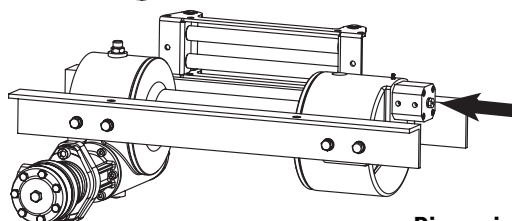

Dimensions [inch]
MM

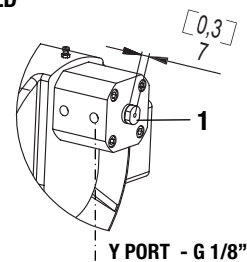

Checking the air-cylinder shaft (1) being in as shown (pict.25).

WARNING

Check the action of the sliding clutch, making sure it is fully engaging with cable drum. Clutch is fully engaged when jaw clutch perfectly match jaw drum. To let jaws match together it could be necessary runs drum manually or by spooling out the cable till engaging or powering drum (short intermittence) in winding or unwinding direction. All these


operations must be ran with no load.

DANGEROUS

If clutch has not been fully engaged (pict.27), in winching operation while is pulling a load, can cause the suddenly drum disengagement and as a consequence the load drifts.

WARNING

Check clutch must be fully engaged as shown (pict.26).

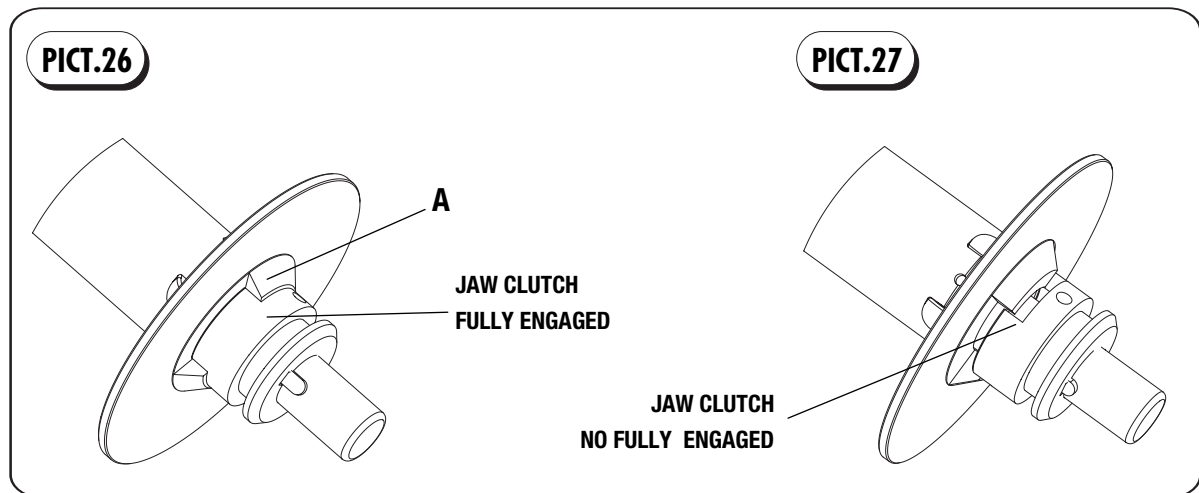

NOTE

Illustrations shown (pict.26-27) are just as demonstration. This side of drum is fully hidden when winch is in use.

WARNING

Not proper extended clutch operation (manual or air system), even if doesn't cause a load drifts in a short period, could cause edge wear of sliding jaw clutch an drum clutch (ref.A), till moment where would be impossible engage drum

anymore, or will be not capable to hold the load.

IMPORTANT

To insure an efficient drum clutch operation (air-clutch version) a proper connection to the vehicle air circuit must be provided by planning filters and pressure regulator as well as their own maintenance (chapter 5.1.1).

IMPORTANT

Maintenance exigency increase according to the winch working conditions and in case of its occasional use as well.


When pulling the clutch lever(1) (pict.28) to engage or disengage winch drum, the ball and spring lock system (Pos.1 e Pos.2 pict.29) warns with a snap that has took place.

WARNING

A missed snap warns drum has not been fully engaged or disengaged

DANGEROUS

Drum not fully engaged or disengaged gives problem described on pict.27, page 35.

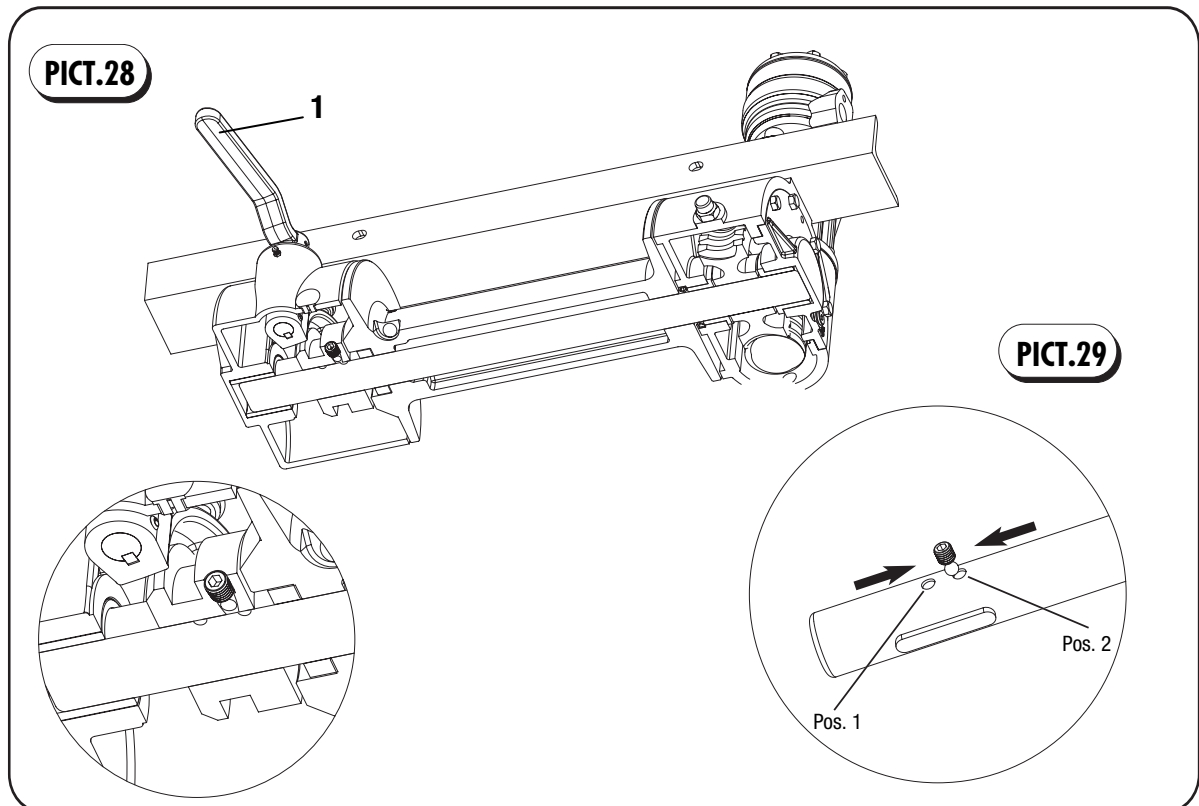

2. Act hydraulic control valve or push the radio control button for winding rope onto the winch drum.

WARNING

Winch operator start pulling slowly and only after having keep tensioned cable and verified cable/hook has been securely fastened to the vehicle/load.

DANGEROUS



The suddenly under load wire rope breaking or any yielding who involve an hook release, causing a dangerous rope stroke. Winch operator or other persons have to keep a safe distance from the working length of the wire rope.



WARNING

In car carrier applications after pulling vehicle on carrier, be sure to secure vehicle to carrier bed. Do not maintain load on winch cable while transporting vehicle, do not use winch as a tie down (pict.30)



DANGEROUS

Do not disengage clutch under load.



DANGEROUS

Never attempt to pull more than the winch is rated for.



DANGEROUS

Never try to guide cable while winching.



DANGEROUS

Do not move your vehicle to assist the winch in pulling a load. Winch failure, may cause serious injuries



DANGEROUS

Never try to attempt lateral pullings, in reference to the centreline of the vehicle where the winch is installed (pict. 31). Winch and vehicle where the winch is installed could be damaged, and result in serious injury.




WARNING




Do not use winch to lift, support or otherwise transport personnel.

PICT.30

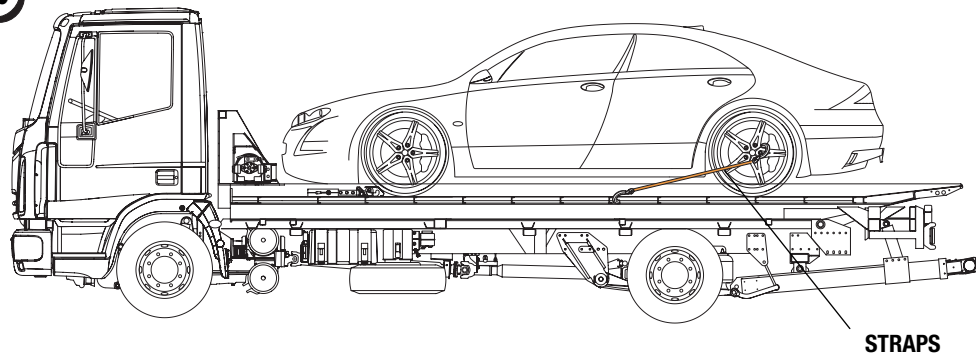

PICT.31

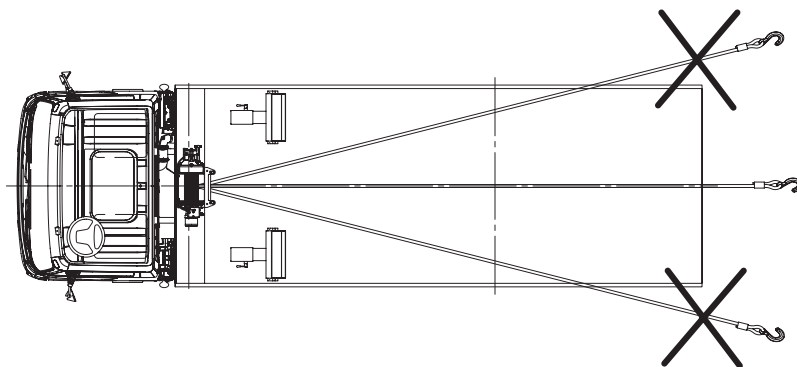


SECTION 4 ACCESSORIES

4.1 ACCESSORIES


RH winches have been designed to be equipped with several accessories such as :

- ◆ Standard roller fairlead (ref.1 pict.32)
- ◆ Heavy-duty roller fairlead (ref.2 pict.32)
- ◆ Cable tensioner (ref.3 pict.33)


PICT.32

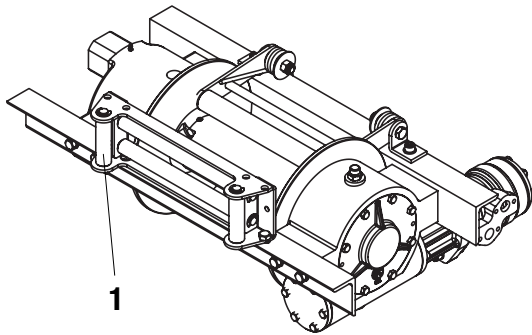

2

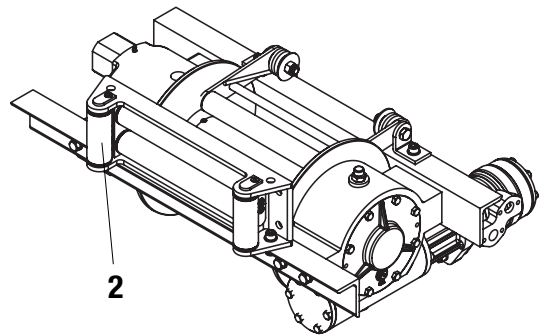

PICT.33

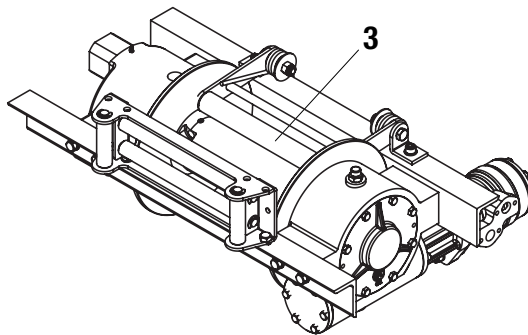

3

4.1.1 ROLLER FAIRLEAD

Roller fairlead is made up by 2 horizontal rollers and 2 vertical rollers, used for lateral pullings to avoid cable damages to the vehicle where the winch is installed. For RH winches are available two different model:


- ◆ Standard zinc-plated roller fairlead with iron rollers
- ◆ Heavy-duty zinc-plated roller fairlead with hardened steel rollers

4.1.2 CABLE TENSIONER


Cable tensioner is used to keep cable tightened on the drum, while the winch is in freespool mode. Cable tensioner does not insure that the cable will wind onto the drum in orderly manner.

4.2 RECOMMENDATIONS FOR USE

PICT.34

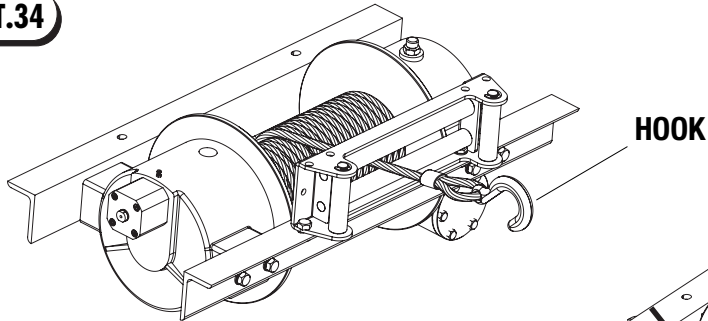

PICT.35

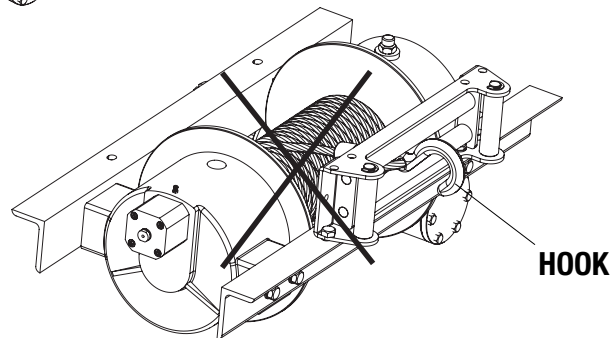

4.2.1 ROLLER FAIRLEAD



IMPORTANT

The use of roller fairlead does not insure that the cable will wind onto the drum in an orderly manner.



IMPORTANT

The proper fleet angle must be maintained for the cable to wind onto the drum in an orderly manner as shown in chapter 2.3.



DANGEROUS

Stop reel-in of cable before hook enters fairlead rollers, as shown in pict.34-35. Failure to do so, may cause damage or breakage to the rope, winch, vehicle and serious injuries.



DANGEROUS

Do not put hands or feet near rotating parts or moving wire rope. Wire rope under tension can cause serious personal injury. Before operator power a winch, he is required to check that the area around the winch and load being hauled is clear.



DANGEROUS


Never try to guide cable while winching.




IMPORTANT

In order that accessories such as roller fairlead and cable tensioner, can work properly a maintenance is recommended, as shown in chapter 5.1.1.

PICT.36

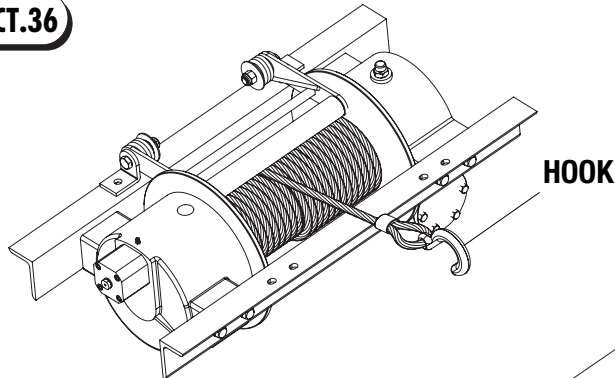

PICT.37

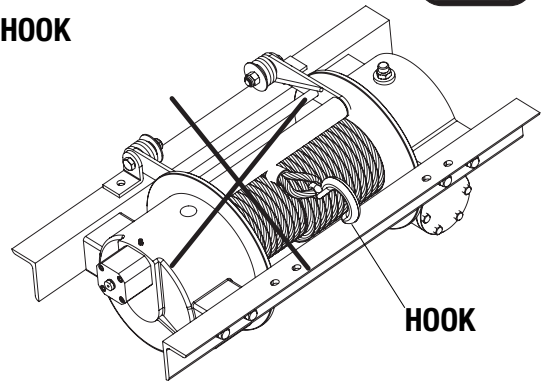

4.2.2 CABLE TENSIONER



IMPORTANT

The use of cable tensioner does not insure that the cable will wind onto the drum in an orderly manner.



IMPORTANT

The proper fleet angle must be maintained for the cable to wind onto the drum in an orderly manner as shown in chapter 2.3.



DANGEROUS



Stop reel-in of cable before hook enters rope tensioner roller, as shown in pict.36-37. Failure to do so, may cause damage or breakage to the rope, winch, vehicle and serious injuries.



DANGEROUS



Do not put hands or feet near rotating parts or moving wire rope. Wire rope under tension can cause serious personal injury. Before operator power a winch, he is required to check that the area around the winch and load being hauled is clear.



DANGEROUS



Never try to guide cable while winching.



IMPORTANT


In order that accessories such as roller fairlead and cable tensioner, can work properly a maintenance is recommended, as shown in chapter 5.1.1.

SECTION 5 MAINTENANCE

5.1 MAINTENANCE

Winches mod. JE are designed to reduce maintenance to wire rope and gear housing

oil level only.

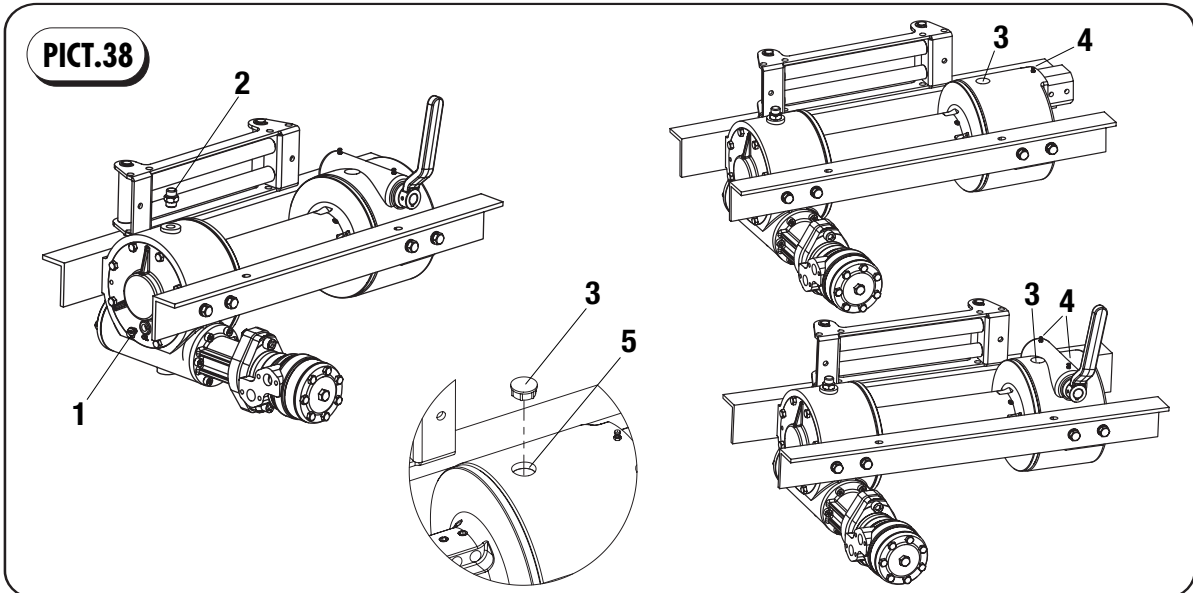

5.1.1 MONTHLY MAINTENANCE




Technical staff required :
Technician or user



Procedure:

1. Inspect the cable for damage and lubricate frequently with viscous oils or light grease with additive adhesive with graphite or bisulfure molybdenum. **If cable becomes frayed with broken strands, replace immediately by following procedure indicated on chapter 2.8.**



2. Worm and gear are bathed in oil. Keep oil to level hole.

3. To check oil level: remove oil level plug (1) and check oil level. Oil level should be kept up to oil level hole. If oil level is below level hole, remove breather plug (2) and add oil **ESSO Spartan EP320** or **IP Mellana 320**. Tightening plugs.



IMPORTANT

Keep lubricated drum clutch through inspection hole (5). For manual or air clutch version, lubricate drum clutch through grease fitting (4). Never utilise high pressure grease system.



WARNING

Remove the plastic plug (ref.3 pict.38) and inspect the clutch shifter (ref.10, part list chapter 7.2-7.4-7.6, pages 48-50-52), check for damage or excessive wear. Observe the jaws on the clutch, checking for rounding of the driving faces. If rounding has occurred it should be replaced.




WARNING

Periodically inspect rope mounting setscrews and tighten if necessary. (ref.12 - 13 page 32).


RH winches can be equipped with roller fairlead and cable tensioner. The roller fairlead is available in two different model: standard roller fairlead with iron rollers and heavy-duty roller fairlead with hardened steel rollers.

PICT.39

STANDARD ROLLER FAIR LEAD GREASING

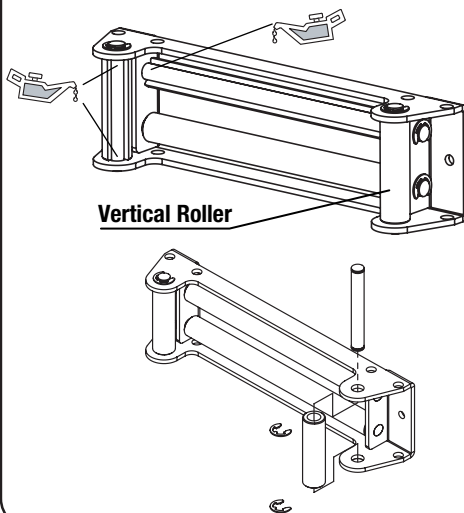

HEAVY-DUTY ROLLER FAIR LEAD GREASING

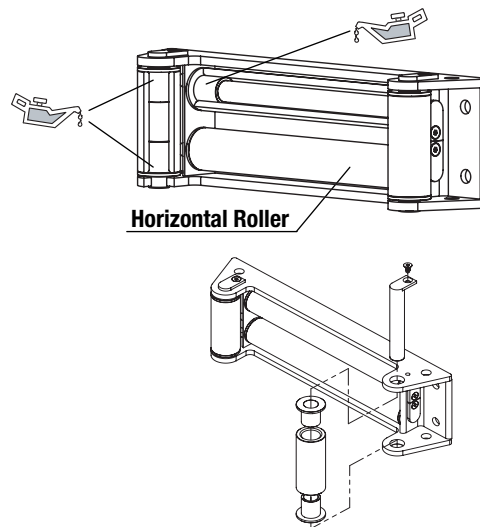

4. The Roller fairlead rollers must roll free to let wire rope slide perfectly. Elements such as: salt, water, oxidation and a bad maintenance can cause the rollers locking, and excessive wire rope wear. The Roller fairlead rollers bad operation, can cause their own rapid wear. We recommend to keep rollers lubricated, with medium dense oil, between axle and roller as shown on pict.39.



IMPORTANT

Fairlead rollers are zinc plated. Treatment with time will be removed by rope sliding.



IMPORTANT

Fairlead rollers sliding on wire rope, when show an excessive wear must be replaced.



WARNING


A roller excessively worn , particularly if it has deep stripes, could damage the wire rope.

5. Cable tensioner roller is made in copolymer acetate. This material reduces maintenance. In very dirty environments, we recommend to keep maintenance and roller lubricated, with medium dense oil as shown (pict.40). In


case of excessive locking, cable tensioner roller can be disassembled as shown on pict.41.

PICT.40

CABLE TENSIONER GREASING

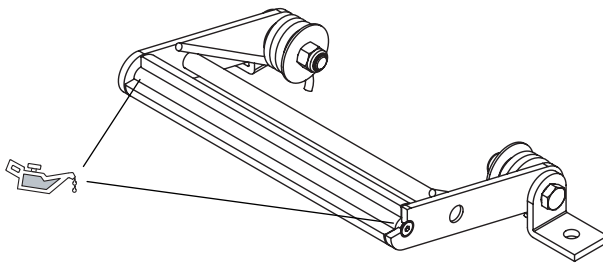

PICT.41

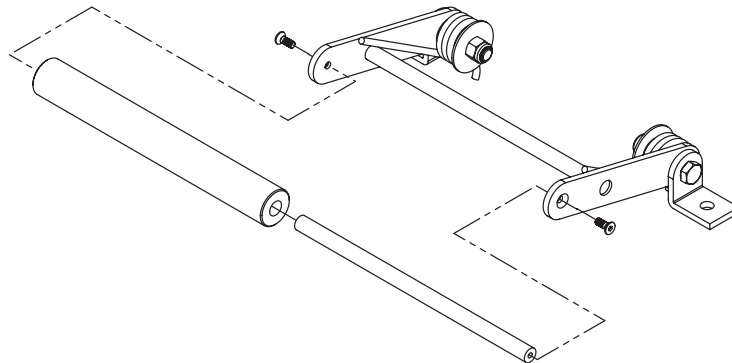

IMPORTANT


Cable tensioner roller sliding on wire rope, when shows an excessive wear must be replaced.



WARNING

A roller excessively worn, particularly if it has deep stripes, could damage the wire rope.

PICT.42

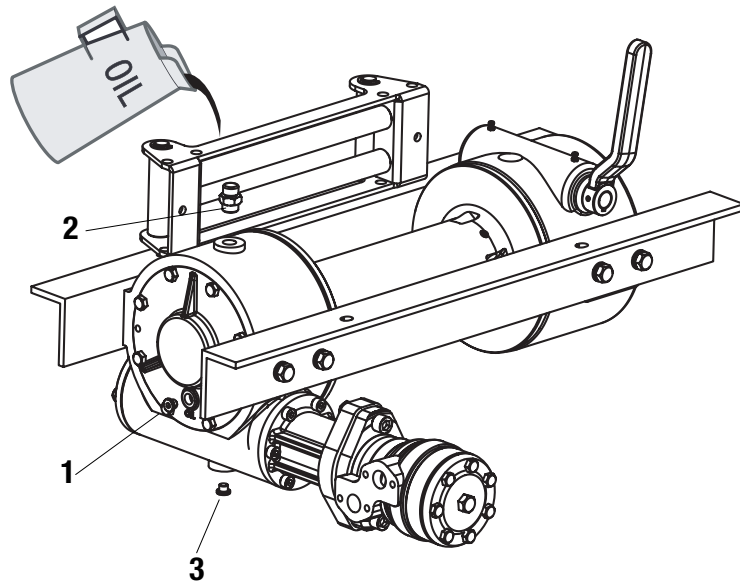

5.1.2 ANNUAL MAINTENANCE



Technical staff required :
Technician or user

Model	Q.ty
RNH	600 Gr.
RSH	600 Gr.
RCH	600 Gr.

Procedure:

At least once a year, it is necessary inspect oil level. To inspect oil level follow instruction as indicated in chapter 5.1.1 step 3. To fully replace the oil do as follow :

1. Remove fill/breather plug (2) and oil level plug (1).
2. Drain oil from winch by removing drain plug (3) taking care to put the oil drained in a container (approx. 1,5 Lt. capacity).
3. Tighten drain plug (3) and fill up worm gear housing with new oil through oil hole (2) till reach oil level hole (1) (see table beside for oil quantity).

4. Tighten oil level plug (1) and plug (2).



IMPORTANT

To avoid pollution, the oil drained from the winch, must be carried off in compliance with regulation.



WARNING

Inspect mounting capscrews and tighten if necessary.

SECTION 6

TROUBLE SHOOTING GUIDE



6.1 TROUBLE SHOOTING GUIDE

CONDITIONS	POSSIBLE CAUSE	CORRECTION
Drum will not rotate at no load in the free spooling position.	- The winch is misaligned.	- Check winch mounting, chapter 2.2-2.3-2.4 on pages 20-21-22-23.
	- Load greater than rated capacity of winch.	- Check technical data on pages 8-10-12-14-16.
Drum will not rotate under load.	- Low hydraulic system pressure.	- Check hydraulic system pressure and winch performance charts on pages 8-10-12-14-16.
	- Low hydraulic system pressure.	- Check hydraulic system pressure and winch performance charts on pages 8-10-12-14-16.
Winch runs too slow.	- Motor worn out.	- Replace the motor (rif.27) spare parts drawing on pages 48-50-52.
	- The winch is misaligned.	- Check winch mounting, chapter 2.2-2.3-2.4 on pages 20-21-22-23.
		- Check chapter 2.7 on page 27 and chapter 3.1 on pages 33/36.
		- Check shaft ref.44 parts drawing on pages 48-50-52 doesn't lock for a bad maintenance
	- Clutch doesn't disengage.	
Drum will not free spool.		- Check if keys ref.7 parts drawing on pages 48-50-52 are pulled out of shape by overload.
	- The winch is misaligned.	- Check winch mounting, chapter 2.2-2.3-2.4 on pages 20-21-22-23.

TROUBLE SHOOTING GUIDE

CONDITIONS	POSSIBLE CAUSE	CORRECTION
Oil leakage.	- Damaged oil seals, O-rings.	- Replace gaskets ref.11-12, oil seals ref.23-55 , O-rings ref.30 parts drawing on pages 48-50-52.
	- Oil plugs loosens.	- Tighten oil plugs, Section 5 chapter 5.1.1.
	- Excessive oil quantity in gear housing.	- Section 5, chapter 5.1.1-5.1.2.
Oil leakage from gear housing or Fill/breather plug.	- Hydraulic orbital motor shaft oil seal damaged.	- Replace hydraulic orbital motor shaft oil seal or hydraulic orbital motor.
Load drifts.	- Bronze Gear worn out	- Replace bronze gear ref.8 parts drawing on pages 48-50-52.
	- Excessive heavy-duty operation	- Check performance charts, par.1.4.2 / 1.4.16.
	- Drum clutch worn out	- Check drum clutch Section.3 on pages on 35 - 36.
	- Drum shaft failure	- Replace shaft ref. 5 and keys ref.6-7 parts drawing on pages 48-50-52.
Excessive noise.	- Hydraulic system flow too high.	- Check hydraulic system pressure and winch performance charts on pages 8-10-12-14-16.
	- Oil level too low.	- Check oil level, through oil level plug according instructions chapter 5.1.1 on page 41.
Cable birdnests when clutch is disengaged.	- Teflon discs worn out.	- Replace teflon discs and springs, ref.16 -15 parts drawing on pages 48-50-52.
	- Wire rope too hard.	- Replace wire rope. Mount a cable tensioner.

SECTION 7 PARTS LIST




7.1 RNH 4400 WINCH PARTS LIST

COD.	REF.	DESCRIPTION	Q.TY	COD.	REF.	DESCRIPTION	Q.TY
	1	GEAR HOUSING	1		34	BUSHING	2
	2	GEAR HOUSING COVER	1		35	CAPSCREW UNI 5927 M10x12	2
	3	BUSHING	1		36	MOUNTING ANGLE (CABLE TENSIONER SIDE)	1
	4	BUSHING	1		37	MOUNTING ANGLE (ROLLER RAIL/LEAD SIDE)	1
	5	SHAFT	1		38	WASHER UNI 6592 D10	8
	6	KEY 12x12x42	2		39	CAPSCREW UNI 5739 M10x30	8
	7	KEY 12x12x70	2		40	MANUAL CLUTCH HOUSING	1
	8	GEAR RING Z=29	1		41	BUSHING	1
	9	THRUST WASHER	1		42	NYLON PLUNG	1
	10	CLUTCH	1		43	MANUAL CLUTCH FORK	1
	11	GEAR HOUSING COVER GASKET	1		44	FORK SHAFT	1
	12	FLANGE COVER GASKET	2		45	CLUTCH HAND LEVER	1
	13	CAPSCREW M8x20 UNI 5739	8		46	LUBRICATOR M6 UNI 7673	2
	14	CAPSCREW M8x25 UNI 5739	6		47	SHAFT KEY 6x6x50	1
	15	SPRING	2		48	CLUTCH HAND LEVER KEY 5x7,5	1
	16	TEFLON DISC	2		49	CAPSCREW UNI 5927 M6x6	1
	17	FILL/BREATHER PLUG 3/8" G	1		50	PIN UNI 6873 7x36	1
	18	DRAIN PLUG 3/8" G	1		52	WORM GEAR KEY 6x6x32	1
	19	LEVEL PLUG 1/4" G	1		53	NUT M12 UNI 5587	2
	20	CLUTCH BALL	1		54	SNAP RING D25	1
	21	FLANGE	1		55	OIL SEAL 25x45x10	1
	22	BEARING 7306	2		58	LOCK WASHER UNI 9195B D10	8
	23	OIL SEAL 45x60x7	1		60	THRUST WASHER 45,2x76x0,2	1
	24	MANUAL CLUTCH SPRING	1				
	25	CAPSCREW UNI 5923 M12x10	1		24A	AIR CLUTCH SPRING	1
	26	COUPLING SUPPORT	1		40A	AIR CLUTCH HOUSING	1
	27	HYDRAUL. MOTOR 125cc	1		41	BUSHING	1
	28	CAPSCREW M12x50 UNI 5931	2		42	NYLON PLUG	1
	29	LOCK WASHER UNI 9195B D12	2		43A	AIR CLUTCH FORK	1
	30	COUPLING SUPPORT	1		45A	AIR CYLINDER	1
	31	CAPSCREW M8x25 UNI 5931	6		46	LUBRICATOR M6 UNI 7673	1
	32	WORM GEAR	1		49A	CAPSCREW UNI 5931 M6x60	4
	33	DRUM	1		50A	LOCK NUT UNI 7473 M12	1

7.3 RSH 4500 RSH 5250 WINCH PARTS LIST

COD.	REF.	DESCRIPTION	Q.TY	COD.	REF.	DESCRIPTION	Q.TY
	1	GEAR HOUSING	1		34	BUSHING	2
	2	GEAR HOUSING COVER	1		35	CAPSCREW UNI 5927 M10x12	2
	3	BUSHING	1		36	MOUNTING ANGLE (CABLE TENSIONER SIDE)	1
	4	BUSHING	1		37	MOUNTING ANGLE (ROLLER RAIL/LEAD SIDE)	1
	5	SHAFT	1		38	WASHER UNI 6592 D10	8
	6	KEY 12x12x42	2		39	CAPSCREW UNI 5739 M10x30	8
	7	KEY 12x12x70	2		40	MANUAL CLUTCH HOUSING	1
	8	GEAR RING Z=29	1		41	BUSHING	1
	9	THRUST WASHER	1		42	NYLON PLUNG	1
	10	CLUTCH	1		43	MANUAL CLUTCH FORK	1
	11	GEAR HOUSING COVER GASKET	1		44	FORK SHAFT	1
	12	FLANGE COVER GASKET	2		45	CLUTCH HAND LEVER	1
	13	CAPSCREW M8x20 UNI 5739	8		46	LUBRICATOR M6 UNI 7673	2
	14	CAPSCREW M8x25 UNI 5739	6		47	SHAFT KEY 6x6x50	1
	15	SPRING	2		48	CLUTCH HAND LEVER KEY 5x7,5	1
	16	TEFLON DISC	2		49	CAPSCREW UNI 5927 M6x6	1
	17	FILL/BREATHING PLUG 3/8" G	1		50	PIN UNI 6873 7x36	1
	18	DRAIN PLUG 3/8" G	1		52	WORM GEAR KEY 6x6x32	1
	19	LEVEL PLUG 1/4" G	1		53	NUT M12 UNI 5587	2
	20	CLUTCH BALL	1		54	SNAP RING D25	1
	21	FLANGE	1		55	OIL SEAL 25x45x10	1
	22	BEARING 7306	2		58	LOCK WASHER UNI 9195B D10	8
	23	OIL SEAL 45x60x7	1		60	THRUST WASHER 45,2x76x0,2	1
	24	MANUAL CLUTCH SPRING	1				
	25	CAPSCREW UNI 5923 M12x10	1		24A	AIR CLUTCH SPRING	1
	26	COUPLING SUPPORT	1		40A	AIR CLUTCH HOUSING	1
	27	HYDRAUL. MOTOR 125cc (MOD.4500)	1		41	BUSHING	1
	27	HYDRAUL. MOTOR 160cc (MOD.5250)	1		42	NYLON PLUG	1
	28	CAPSCREW M12x50 UNI 5931	2		43A	AIR CLUTCH FORK	1
	29	LOCK WASHER UNI 9195B D12	2		45A	AIR CYLINDER	1
	30	COUPLING SUPPORT	1		46	LUBRICATOR M6 UNI 7673	1
	31	CAPSCREW M8x25 UNI 5931	6		49A	CAPSCREW UNI 5931 M6x60	4
	32	WORM GEAR	1		50A	LOCK NUT UNI 7473 M12	1


7.4 RSH 4400 RSH 5250 WINCH PARTS DRAWING

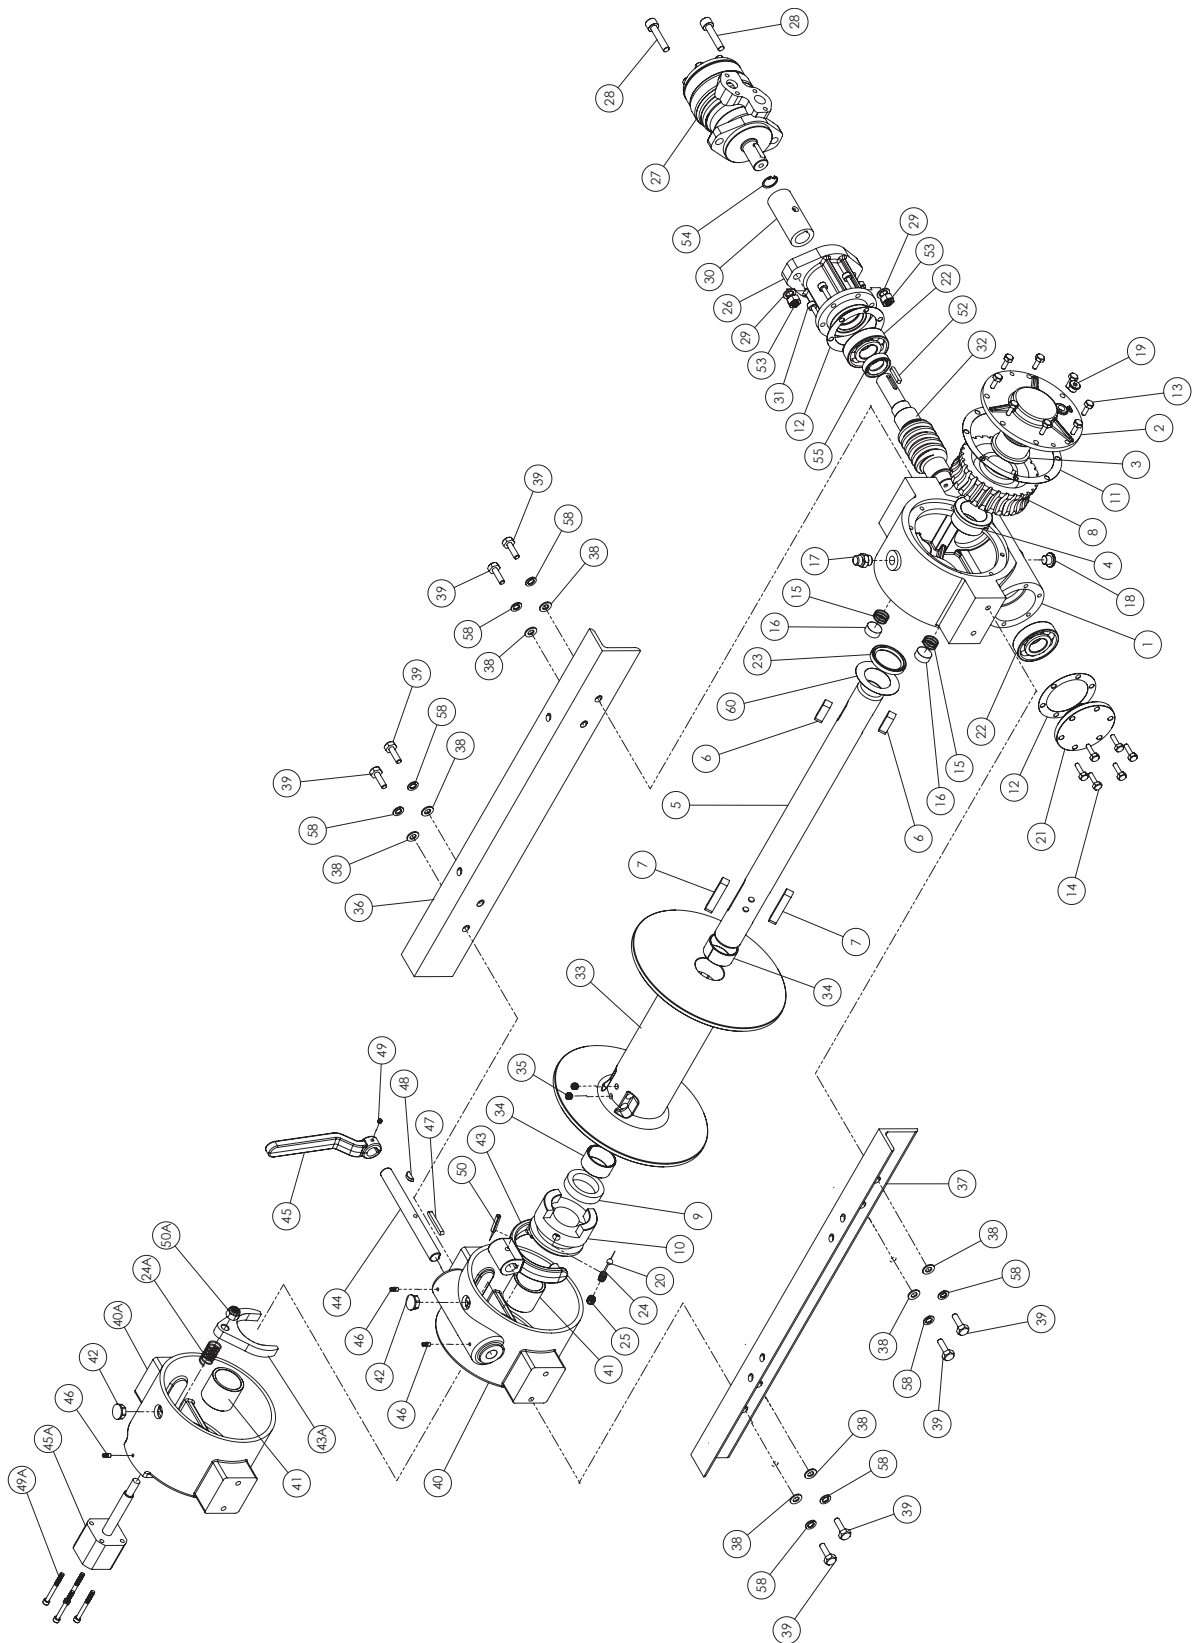

7.5 RCH 4500 RCH 5250 WINCH PARTS LIST


COD.	REF.	DESCRIPTION	Q.TY	COD.	REF.	DESCRIPTION	Q.TY
	1	GEAR HOUSING	1		33	DRUM	1
	2	GEAR HOUSING COVER	1		34	BUSHINH	2
	3	BUSHING	1		35	CAPSCREW UNI 5927 M10x12	2
	4	BUSHING	1		36	MOUNTING ANGLE (CABLE TENSIONER SIDE)	1
	5	SHAFT	1		37	MOUNTING ANGLE (ROLLER PAIRLEAD SIDE)	1
	6	KEY 12x12x42	2		38	WASHER UNI 6592 D10	8
	7	KEY 12x12x70	2		39	CAPSCREW UNI 5739 M10x30	8
	8	GEAR RING Z=29	1		40	MANUAL CLUTCH HOUSING	1
	9	THRUST WASHER	1		41	BUSHING	1
	10	CLUTCH	1		42	NYLON PLUNG	1
	11	GEAR HOUSING COVER GASKET	1		43	MANUAL CLUTCH FORK	1
	12	FLANGE COVER GASKET	2		44	FORK SHAFT	1
	13	CAPSCREW M8x20 UNI 5739	8		45	CLUTCH HAND LEVER	1
	14	CAPSCREW M8x25 UNI 5739	6		46	LUBRICATOR M6 UNI 7673	2
	15	SPRING	2		47	SHAFT KEY 6x6x50	1
	16	TEFLON DISC	2		48	CLUTCH HAND LEVER KEY 5x7,5	1
	17	FILL/BREATHING PLUG 3/8" G	1		49	CAPSCREW UNI 5927 M6x6	1
	18	DRAIN PLUG 3/8" G	1		50	PIN UNI 6873 7x36	1
	19	LEVEL PLUG 1/4" G	1		58	LOCK WASHER UNI 9195B D10	8
	20	CLUTCH BALL	1		60	THRUST WASHER 45,2x76x0,2	1
	21	FLANGE	1				
	22	BEARING 7306	2		24A	AIR CLUTCH SPRING	1
	23	OIL SEAL 45x60x7	1		40A	AIR CLUTCH HOUSING	1
	24	MANUAL CLUTCH SPRING	1		41	BUSHING	1
	25	CAPSCREW UNI 5923 M12x10	1		42	NYLON PLUG	1
	26	COUPLING SUPPORT	1		43A	AIR CLUTCH FORK	1
	27	HYDRAUL. MOTOR 160cc (MOD.4500)	1		45A	AIR CYLINDER	1
	27	HYDRAUL. MOTOR 160cc (MOD.5250)	1		46	LUBRICATOR M6 UNI 7673	1
	28	CAPSCREW M12x50 UNI 5931	2		49A	CAPSCREW UNI 5931 M6x60	4
	29	LOCK WASHER UNI 9195B D12	2		50A	LOCK NUT UNI7473 M12	1
	30	MOTOR O-RING 042	1				
	31	CAPSCREW M8x30 UNI 5931	6				
	32	WORM GEAR	1				

7.6 RCH 4400 RCH 5250 WINCH PARTS DRAWING

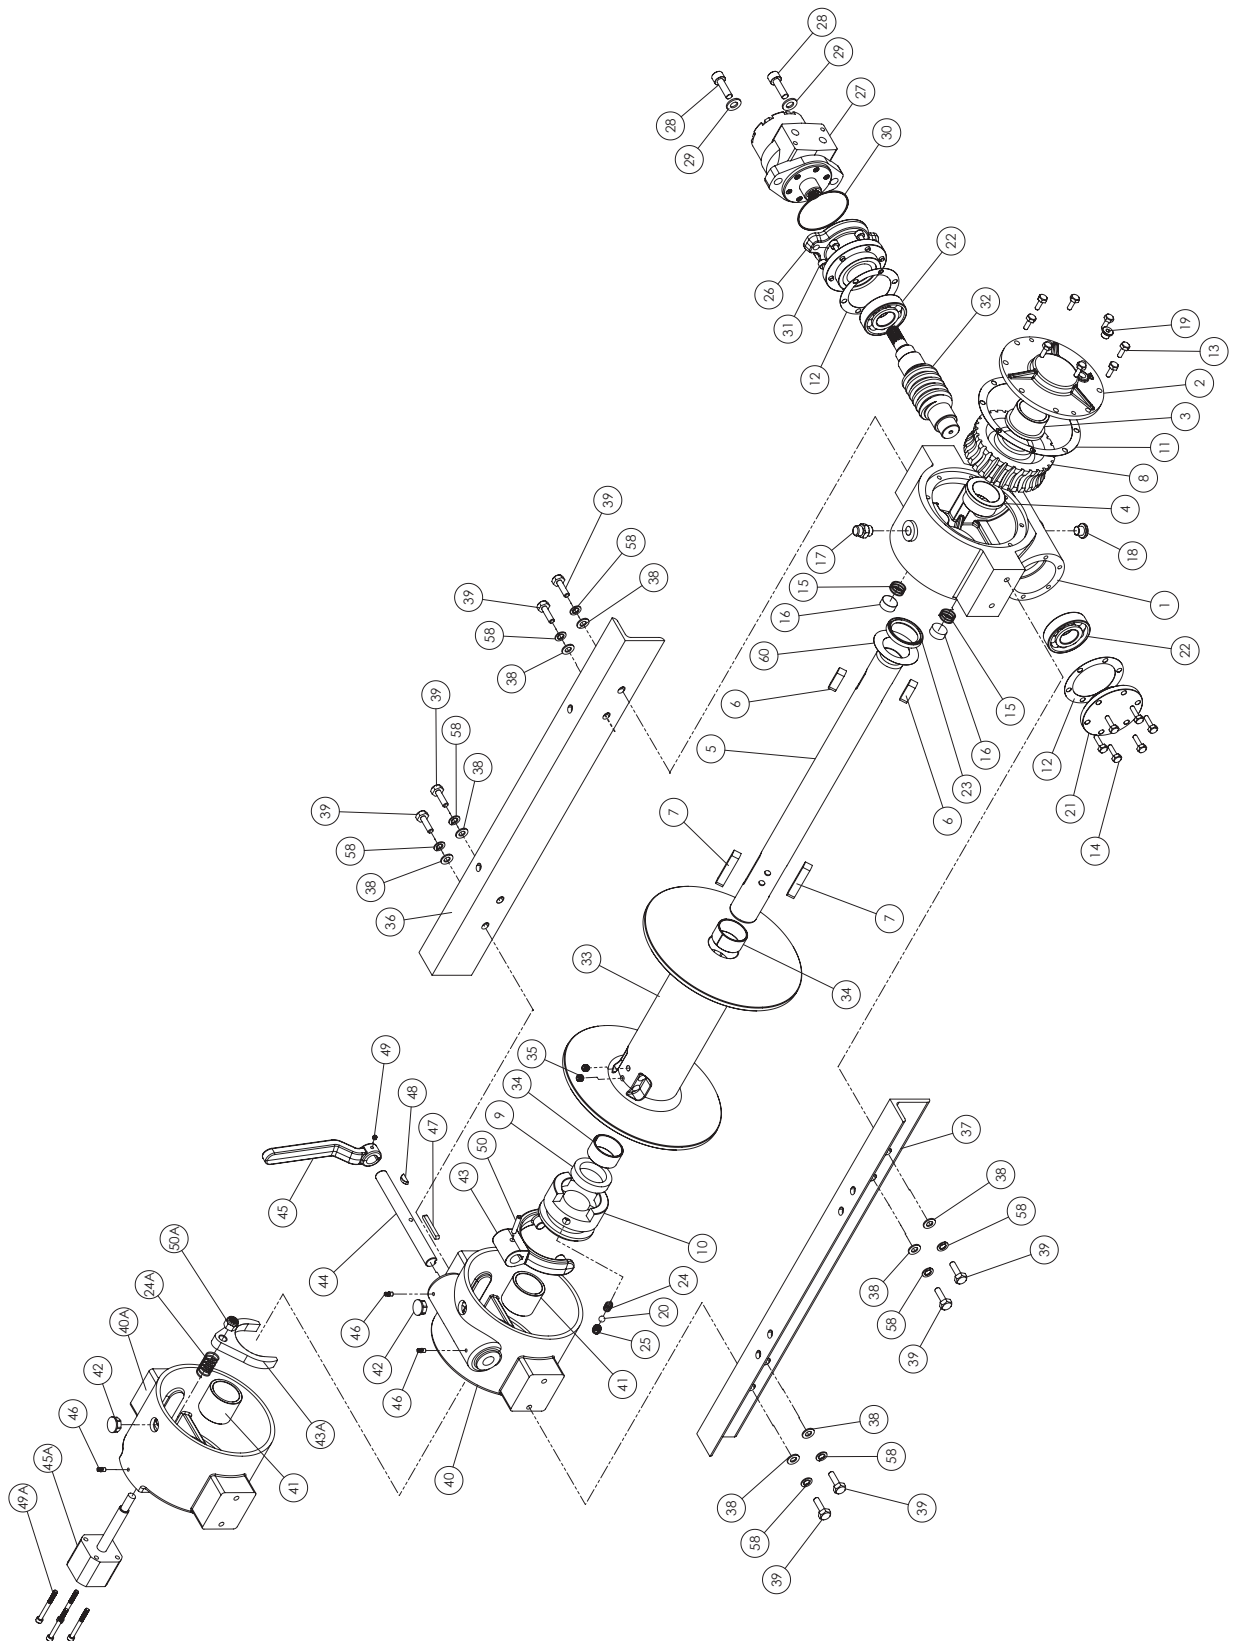


Section 7 Parts List

7.8 STRANDARD ROLLER FAIRLEAD PARTS DRAWING

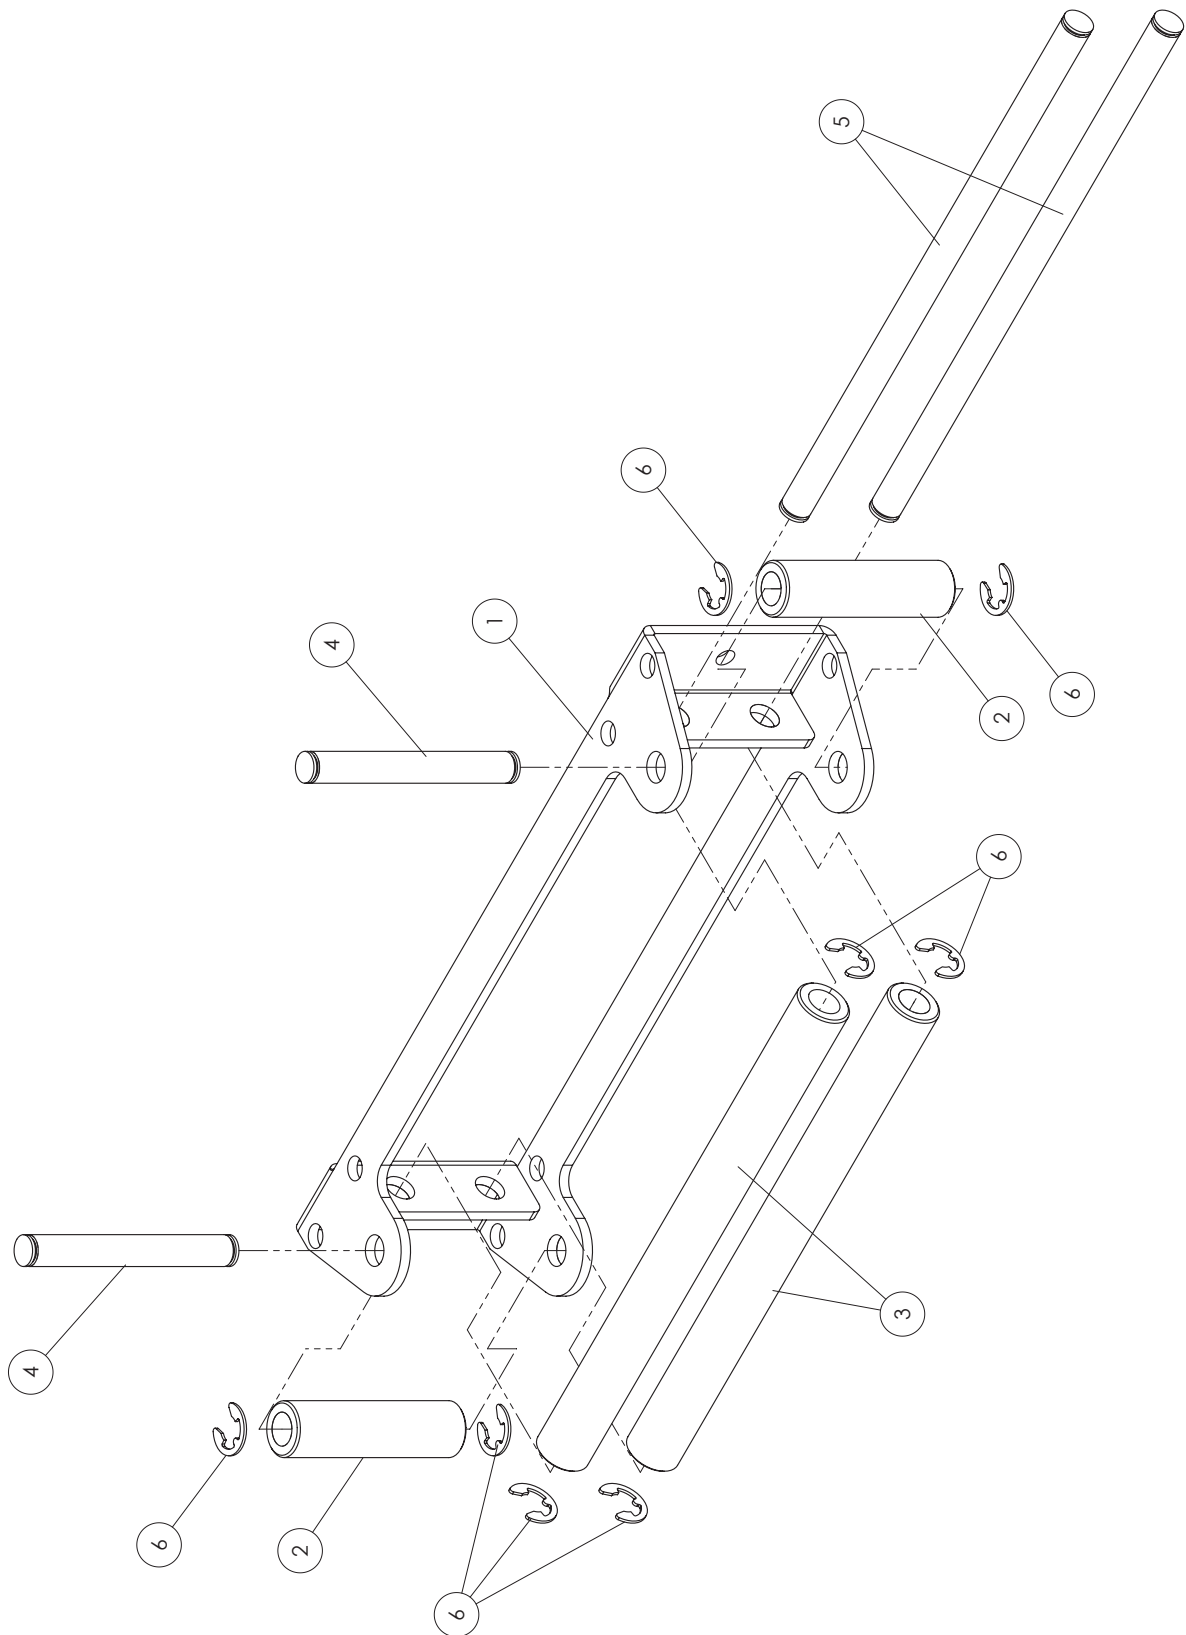


Section 7 Parts List

7.10 HEAVY-DUTY ROLLER FAIRLEAD PARTS DRAWING

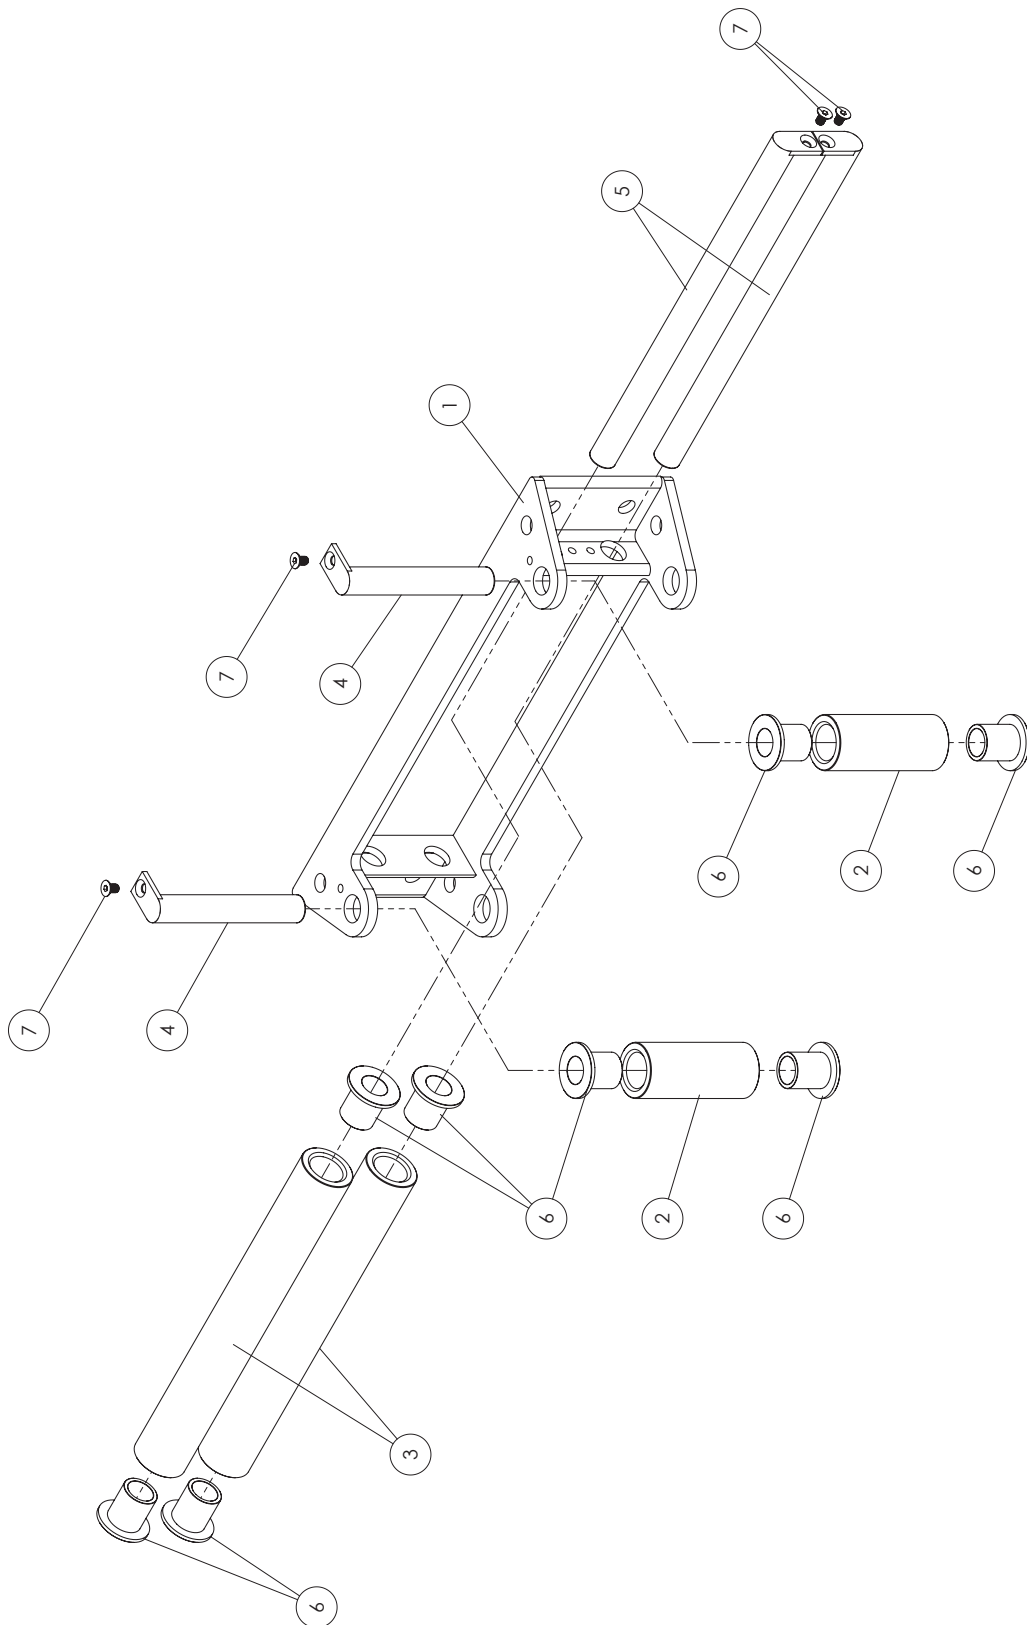

Section 7 Parts List

7.12 CABLE TENSIONER PARTS DRAWING

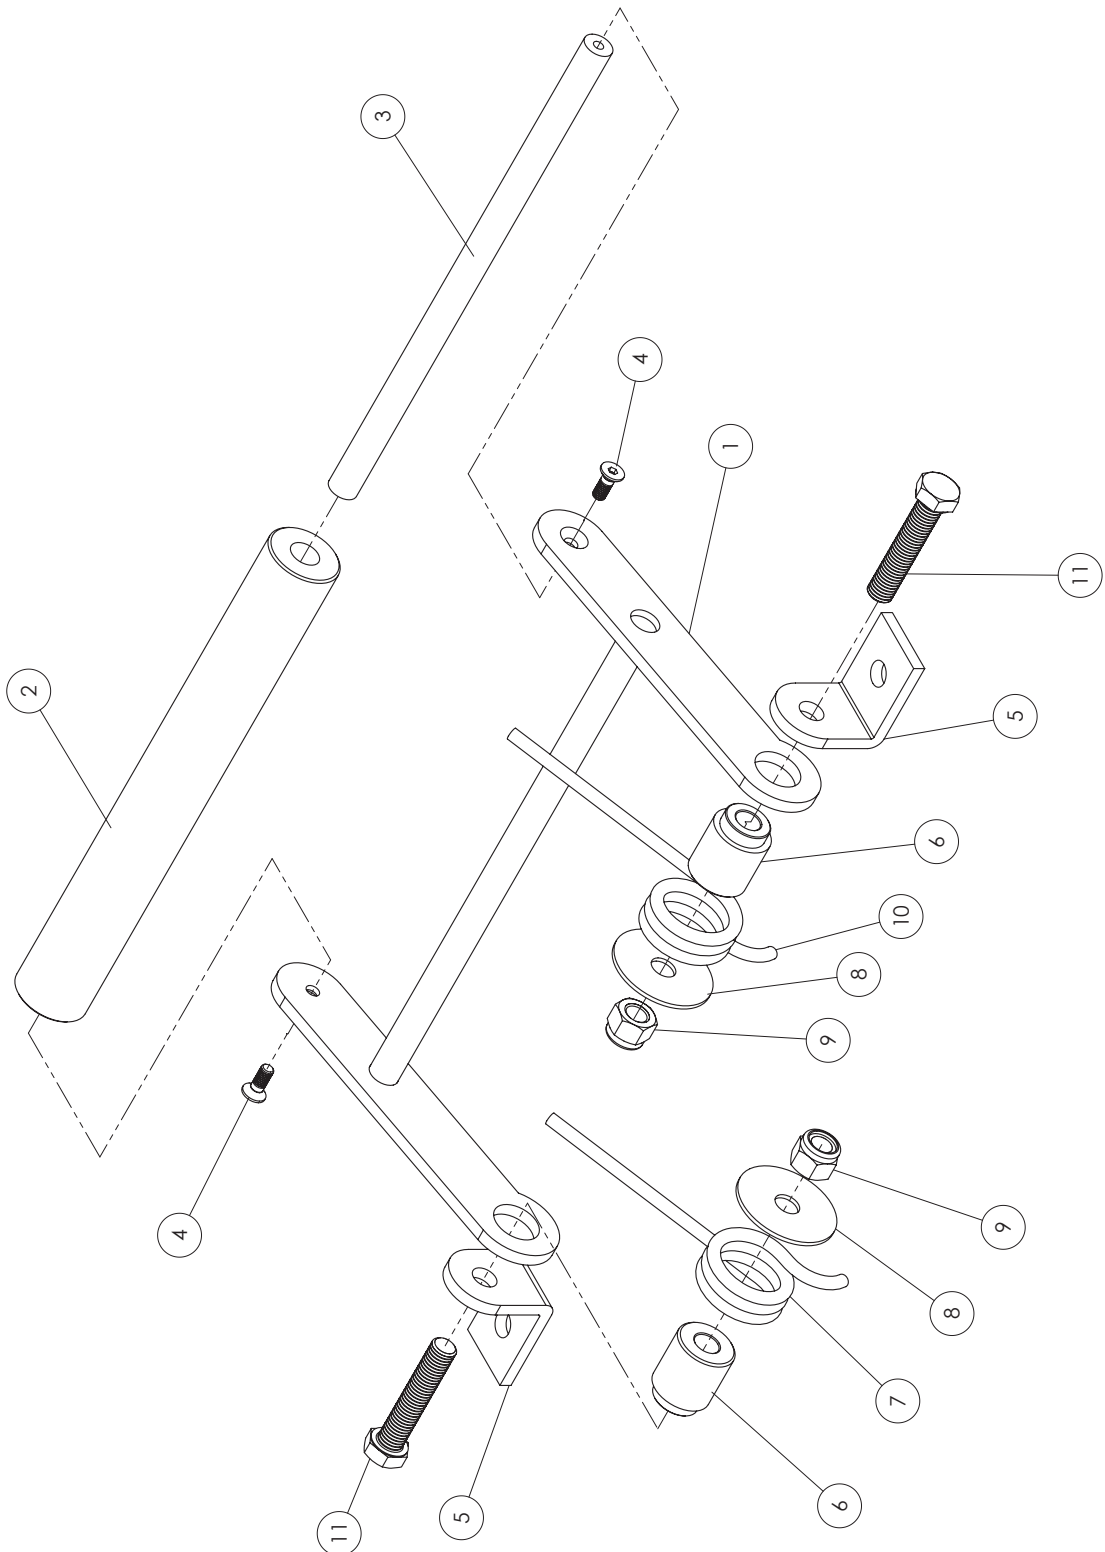



GARANZIA

La Ditta V.I.M.E. s.r.l. garantisce all'originario acquirente , tutte le parti e componenti del verricello , esclusa la fune , di essere esenti da difetti nel materiale e nella produzione per un periodo : di 1 anno per le parti elettriche e meccaniche. L'obbligo , in base a questa garanzia , si limita alla sostituzione o alla riparazione , eseguita presso la Ditta V.I.M.E. s.r.l. o presso un Centro Servizio Autorizzato dalla Ditta V.I.M.E. s.r.l. , di quella parte che si ritenga presenti difetti di materiale o di produzione , in seguito a perizia sulla parte in questione. Questa garanzia non obbliga la V.I.M.E. s.r.l. a sostenere i costi della manodopera o di trasporto , connessi alla sostituzione o riparazione delle parti difettose , ne è valida per un prodotto sul quale sono state apportate delle modifiche o sul quale sono state eseguite riparazioni , se non autorizzate dalla V.I.M.E. s.r.l. stessa , o nel caso di difetti dovuti ad un utilizzo improprio o negligente dell'attrezzatura o ad un montaggio non corretto del verricello. La Ditta V.I.M.E. s.r.l. che segue una politica di continuo miglioramento , si riserva il diritto di migliorare i propri prodotti , apportando delle modifiche nel design o nei materiali , che possano ritenersi desiderabili , senza essere obbligata ad includere tali modifiche nelle attrezzature precedentemente prodotte. La Ditta V.I.M.E. s.r.l. declina ogni responsabilità per sinistri a persone , animali ed a cose derivanti da inosservanza di tutte le istruzioni contenute nel manuale fornito a corredo del verricello ed in particolare per :

- Inosservanza degli aspetti globali della sicurezza.
- Collegamenti scorretti alla fonte di energia.
- Carenza di manutenzione ordinaria e straordinaria.
- Usi impropri diversi da quelli specificati.
- Interventi di personale non qualificato.

GARANTIA

La obligación , en base a esta garantía , se limita a la sustitución o la reparación , realizada a través de V.I.M.E. s.r.l. o de un centro autorizado por la sociedad V.I.M.E. s.r.l. el cual pueda determinar defectos de materiales o de producción. Esta garantía no obliga a V.I.M.E. s.r.l. a soportar los costes de mano de obra o de transporte inherentes a la sustitución o reparación de las partes defectuosas , ni será válida para un producto en el cual se hayan realizado modificaciones o cualquier tipo de reparación , que no hayan sido autorizadas por V.I.M.E. s.r.l. misma , o en el caso de defectos debidos al uso impropio o negligente del equipo o a un montaje no correcto de los componentes. La sociedad V.I.M.E. s.r.l. que sigue una política de continuo mejoramiento , se reserva el derecho de mejorar los propios productos , aportando las modificaciones en los diseños y en los materiales, sin estar obligados a incluir tales modificaciones en los equipos de los productos precedentes. La sociedad V.I.M.E. s.r.l. declina cualquier responsabilidad por siniestros a personas , animales o cosas derivados de la inobservancia de todas las instrucciones contenidas en el manual entregado junto con el componente y en particular por :

- Inobservancia de los aspectos globales de la seguridad.
- Instalaciones incorrectas a la fuente de energía.
- Carencia de mantenimiento ordinario y extraordinario.
- Usos improprios diversos de los especificados.
- Intervenciones de personal no cualificado.

GARANTIE

Die Firma V.I.M.E. s.r.l. gewährleistet dem Erstkäufer, daß die Teile und Komponenten der Seilwinde, das Seil ausgeschlossen, frei von Material - oder Fabrikationsfehlern sind. Die Garantie beträgt 1 Jahr auf die elektrischen und mechanischen Teile. Die Garantie beinhaltet ausschließlich den Austausch oder die Reparatur durch die Firma V.I.M.E. s.r.l. oder durch eine Vertragswerkstatt der Firma V.I.M.E. s.r.l. Dieses gilt nur für nachweisbare Material - oder Fabrikationsfehler am betreffenden Bauteil. Durch diese Garantie ist die Firma V.I.M.E. s.r.l. nicht verpflichtet, Lohn- oder Transportkosten für den Austausch oder die Reparatur des fehlerhaften Bauteils zu übernehmen. Außerdem gilt die Garantie nicht für Teile, an denen von der Firma V.I.M.E. s.r.l. nicht genehmigte Änderungen oder Reparaturen vorgenommen wurden bzw. wenn der Fehler auf den unzumutbaren oder unsachgemäßen Einsatz des Gerätes oder seine nicht ordnungsgemäße Montage zurückzuführen ist. Die Firma V.I.M.E. s.r.l., die sich um eine ständige Verbesserung ihrer Produkte bemüht, behält sich das Recht vor, am Design oder am Material ihrer Produkte die nach ihrem Ermessen notwendigen Änderungen anzubringen, ohne verpflichtet zu sein, diese Änderungen auch an den bereits hergestellten Geräten vorzunehmen. Die Firma V.I.M.E. s.r.l. lehnt jegliche Haftung ab für Schäden an Personen, Tieren oder Sachgegenständen, die auf die Nichteinhaltung der in der mitgelieferten Bedienungsanleitung der Seilwinde enthaltenen Vorschriften zurückzuführen sind. Dieses gilt besonders in den folgenden Fällen:

- Nichtbeachtung der grundsätzlichen Sicherheitsvorschriften.
- Unsachgemäßer Anschluß an die Energiequellen.
- Fehlende Wartung und Instandsetzung.
- Unzumutbarer Einsatz des Gerätes.
- Eingriffe durch unqualifiziertes Personal.

WARRANTY

V.I.M.E. s.r.l. warrants to the original buyer , all parts and components except the wire rope , to be free from defects in materials and workmanship for a period of (one) 1 year for electrical and mechanical components. The obligation under this warranty , statutory or otherwise , is limited to the replacement or repair at V.I.M.E. s.r.l. , or at a point designated by V.I.M.E. s.r.l. of such of part that shall appear to V.I.M.E. s.r.l. , upon inspection of such part , to have been defective in material or workmanship. This warranty does not obligate V.I.M.E. s.r.l. to bear the cost of labour or transportation charges in connection with the replacement or repair of defective parts , nor shall it apply to product upon which repairs or alterations have been made, unless authorized by V.I.M.E. s.r.l. , or for equipment misused , neglected or which has not been installed correctly. V.I.M.E. s.r.l. whose policy is one of continuous improvement , reserves the right to improve its products through changes in design or materials as it may deem desirable without being obligated to notify of such changes in products prior to manufacture. V.I.M.E. s.r.l. has no responsibility for physical injury to persons , animals or property damage that can result from failure to read and apply the instructions contained in the Manual supplied with the winch and especially for :

- Failure with global safety aspects .
- Incorrect linking to the source of energy .
- Deficiency in annual and monthly maintenance .
- Improper uses .
- Any alteration , repair or modification from unauthorized personnel .

V.I.M.E. srl

Via Gramsci, 15 40050 Funo Bologna Italy

Tel. 0039 051 861362 – Fax 0039 051 861961

E-mail : vimeind@tin.it

Web Page: www.vimeindustrial.com