
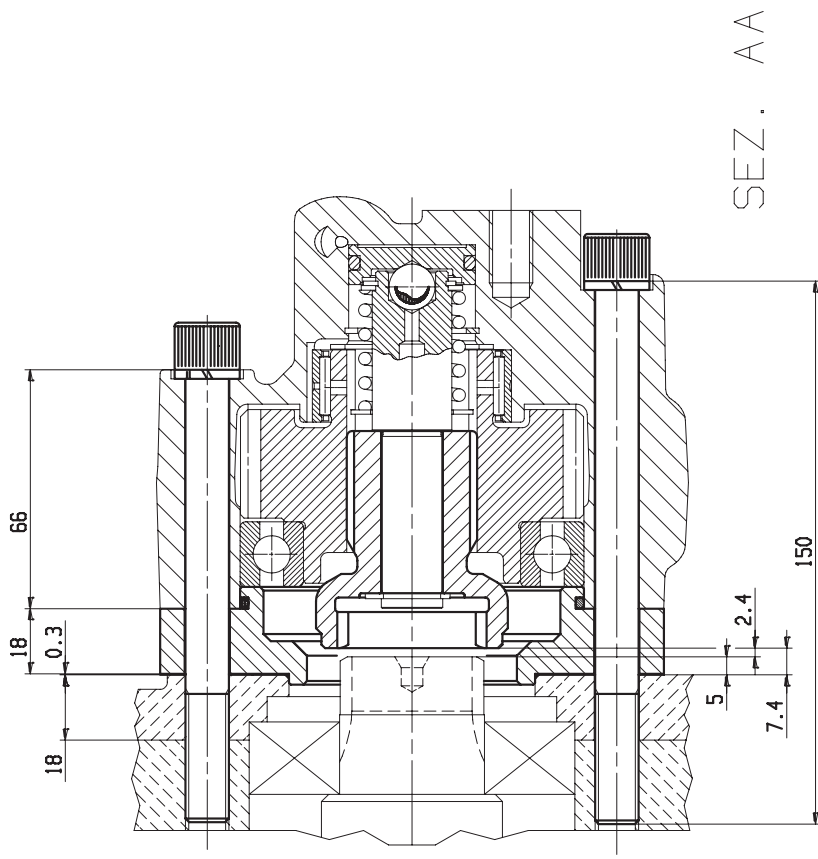


# ISTRUZIONI DI MONTAGGIO ASSEMBLY INSTRUCTIONS

**CODICE KIT**  
KIT CODE

**09704252013**

## **EATON FS 6406 AE (RENAULT 270)**

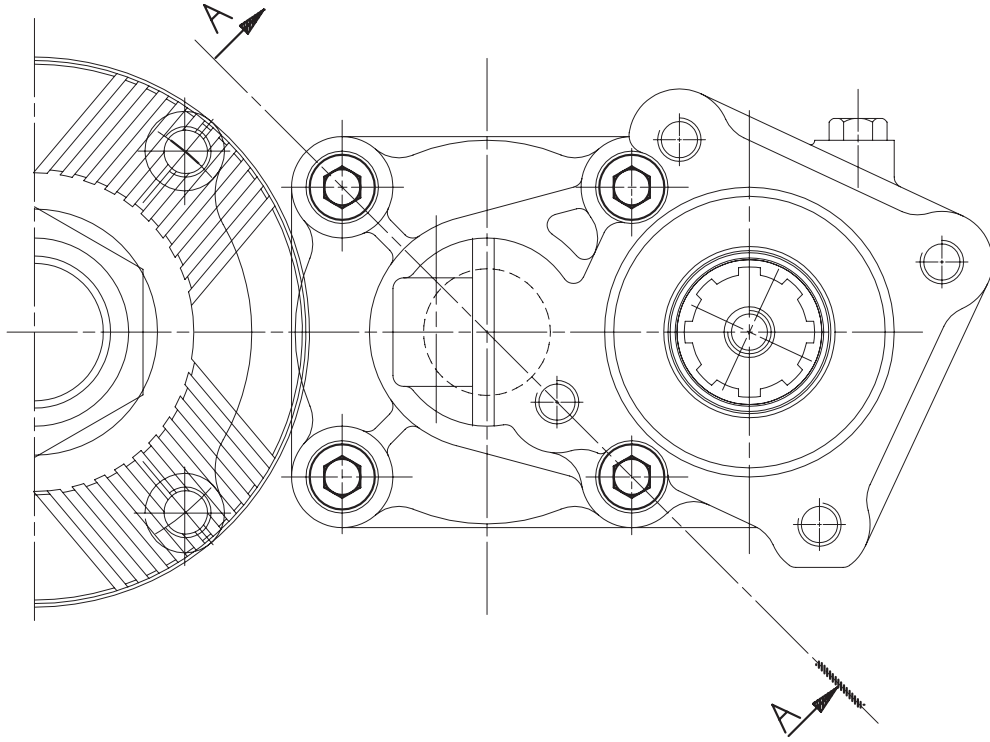

Data: Mercoledì 16 novembre 2005

pag.1

Codice foglio:99700104214

Rev:

**DMFB**<sup>®</sup>

HYDRAULIC COMPONENTS

**O.M.F.B. S.p.A. Hydraulic Components**

We reserve the right to make any changes without notice.

Edition 2005.11 No reproduction, however partial, is permitted.

Via Cave, 7/9 25050 Provaglio d'Iseo (Brescia) Italy. Tel.: +39.030.98.30611

Fax: +39.030.9839207-208 Internet:www.omfb.it e-mail:info@omfb.it