


KIT MONTAGGIO N-FORCE - IVECO S-WAY - BRACKET KIT FOR N-FORCE - IVECO S-WAY -

**CODICE
CODE**

10000270449

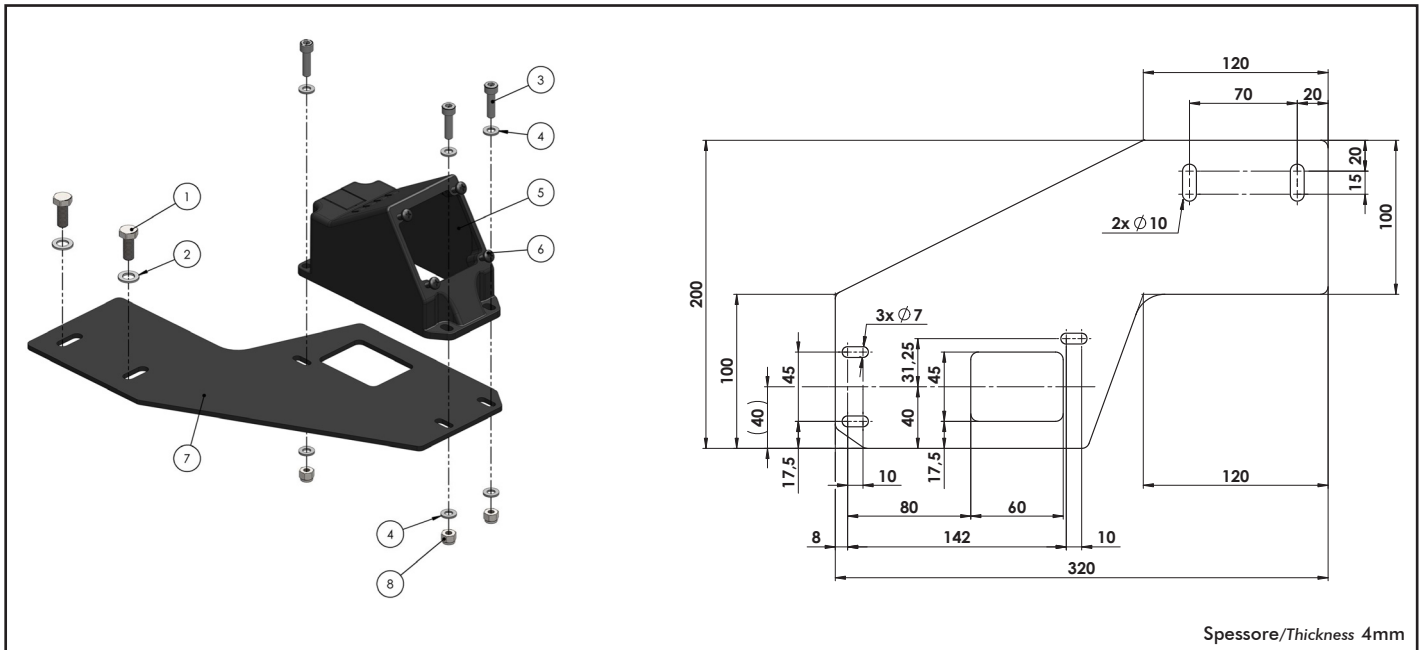

Pos.	Codice Code	Descrizione / Description		Q.
1	50200300048	Vite TE M 8x20 UNI 5739	Screw TE M 8x20 UNI 5739	2
2	50100700064	Rondella piana x M 8 DIN 126	Washer x M 8 DIN 126	2
3	50200200469	Vite TCE M 6x22 UNI 5931	Screw TCE M 6x22 UNI 5931	3
4	50100700046	Rondella piana x M 6	Washer x M 6	6
5	50900001108	Supporto plastica inclinato	Plastic bracket	1
6	50201200127	Vite ATF. 4,8 x 25 ISO 7049	Screw ATF. 4,8 x 25 ISO 7049	4
7	53800403398	Staffa montaggio N-FORCE	Bracket for N-FORCE	1
8	50501000016	Dado ATB.M6-CH 10-H8...	Nut ATB.M6-CH 10-H8...	3

Data: Lunedì 13 gennaio 2020

Codice foglio: 99710000250 Rev: //

