




KIT DISTANZIALI MONTAGGIO SERBATOIO SPACERS MOUNTING KIT FOR SIDE TANKS

DAF FTG

135-901-00773

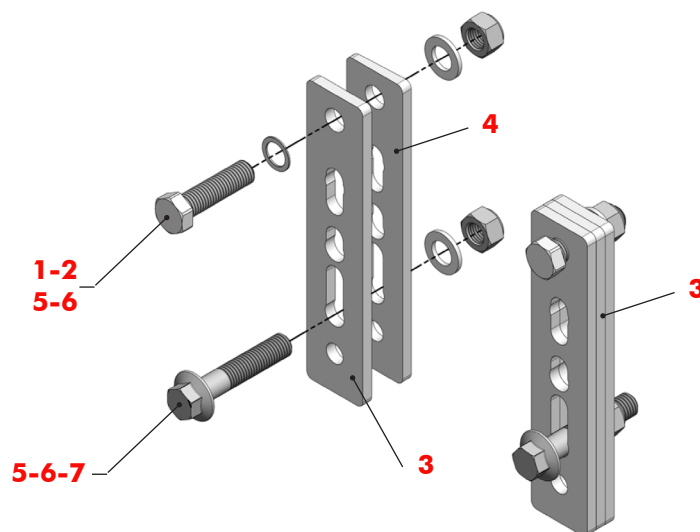

Pos.	Codice	Descrizione	Description	Q.tà
1	50200700099	VITE TE M16 L60 UNI EN 24017 CL10.9	SCREW	2
2	50102000165	RONDELLA ELASTICA SCHNORR x M 16 TIPO S	WASHER SCHNORR x M16 TYPE S	2
3	53800401470	STAFFA DISTANZIALE H8 FISSAGGIO SERBATOIO	BRACKET H8	4
4	53800401514	STAFFA DISTANZIALE H8 INCLIN.2.5° FSG.SRB.	BRACKET H8 TAPERED 2.5°	1
5	50100700108	RONDELLA PIANA X M 16 ZINCATA	WASHER FOR M16	4
6	50501000141	DADO ATB.M16-CH=24 H15 CL.8 UNI 7474	NUT M16	4
7	50200001291	VITE TEFLG.M16X80 DIN6921 10.9 GEOMET	FLANGED SCREW M16 L=80	2

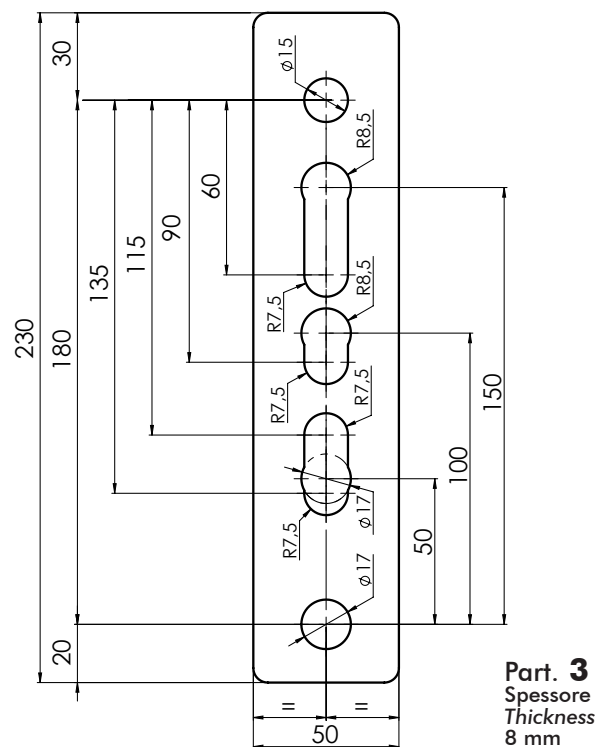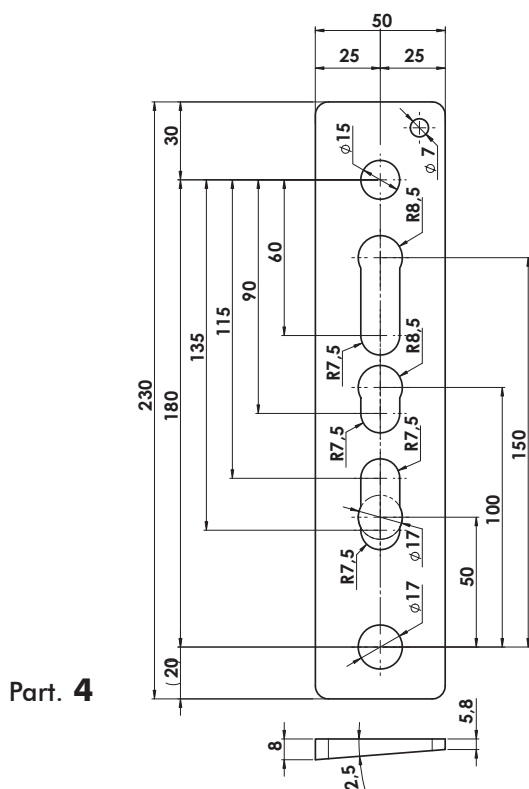

ISTRUZIONI DI MONTAGGIO / MOUNTING INSTRUCTIONS

- 1 - Interporre tra il longherone del telaio del veicolo e le staffe di supporto del serbatoio i distanziali del kit come da schema per ottenere un perfetto allineamento.
- 2 - Fissare quindi definitivamente le staffe del serbatoio al telaio stesso utilizzando le viti M16 fornite nel kit ed i relativi dadi e rondelle. (coppia di serraggio 180Nm).
- 3 - Procedere poi al montaggio del serbatoio sulle proprie staffe seguendo le istruzioni specifiche.

- 1 - Insert the spacers of the kit like in above scheme for a perfect alignment between the cross member of the vehicle frame and the support brackets of the tank.
- 2 - Firmly tighten the support brackets of oil tank by using the M16 screws along with nuts and washers supplied in the kit (tightening torque = 180Nm).
- 3 - Mount then the oil tank onto the brackets by following the specific instructions.



99740013520

Data: Lunedì 01 aprile 2019

Codice foglio: 997-135-90173 Rev: //